
Vodavi Telephone Systems

Station User Guide

Issue	Release	Changes
1.0	12-02	Initial Release
1.1	2-03	Minor revisions for correctness & clarity.
1.2	3-04	<input type="checkbox"/> Includes Trunk-to-Trunk Trans procedure. <input type="checkbox"/> Includes Enhanced ACD AVA/UNA feature. <input type="checkbox"/> Includes ACD Wrapup End feature. <input type="checkbox"/> Includes Call Forward Off-Net button. <input type="checkbox"/> Revises Attendant Unavailable feature to reflect increase of Attendant station capacity from 3 to 6.
1.3	5-04	Additional telephone instrument added.
1.4	9-04	<input type="checkbox"/> Flash-based Voice Mail Quick Reference page is added. <input type="checkbox"/> An In and Out Button feature is added. <input type="checkbox"/> A Page Block option is added to the DND button. <input type="checkbox"/> A UCD Wrapup End feature is added.
1.5	11-04	IP Phone procedures added.
2.0	1-05	<input type="checkbox"/> Call Park locations increased from 8 to 14 for XTS systems. <input type="checkbox"/> Call Pickup Groups increased from 8 to 20 for XTS systems. <input type="checkbox"/> Internal Page Zones increased from 8 to 20 for XTS systems. <input type="checkbox"/> ICLID Call Mgmt Table entries are increased. <input type="checkbox"/> LNR button feature code (650) is added for XTS systems.

LIFE SUPPORT APPLICATIONS POLICY

VODAVI Technology, Inc. products are not authorized for and should not be used within Life Support applications. Life Support systems are equipment intended to support or sustain life and whose failure to perform when properly used in accordance with instructions provided can be reasonably expected to result in significant personal injury or death.

VODAVI Technology, Inc. warranty is limited to replacement of defective components and does not cover injury to persons or property or other consequential damages.

"WARNING: Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause [cancer, and] birth defects or other reproductive harm. **Wash hands after handling."**

Copyright © 2002 VODAVI Technology, Inc.

All Rights Reserved

This material is copyrighted by VODAVI Technology, Inc. Any unauthorized reproductions, use or disclosure of this material, or any part thereof, is strictly prohibited and is a violation of the Copyright Laws of the United States (17 U.S.C. Section 101 et. seq.). VODAVI reserves the right to make changes in specifications at any time and without notice. The information furnished by VODAVI in this material is believed to be accurate and reliable, but is not warranted to be true in all cases.

XTS™ is a registered trademark of VODAVI Technology, Inc.

mlj/2005

Contents

Digital Telephone Features	vi
About This User Guide	1
911 Alert.....	2
Account Codes	3
Using Account Codes.....	3
Verified Account Codes.....	3
Account Codes - Traveling COS (Verified)	4
ACD/UCD.....	5
ACD Call Factor.....	5
ACD Call Qualifier	5
ACD Help	6
ACD Member Status	7
ACD Overflow Available/Unavailable.....	8
ACD Login/Logout	8
ACD Supervisor Display.....	9
ACD Supervisor Login/Logout.....	10
Supervisor Monitor with Barge-In	11
Supervisor One-Touch Record.....	12
ACD/UCD Available/Unavailable	13
ACD Calls In Queue Status Display.....	14
ACD/UCD Wrapup End	15
UCD Calls In Queue Display	15
UCD Overflow Station Forward	16
Alternate Dial Plan	17
Answering Machine Emulation	18
Notification Methods	18
Attendant Features.....	19
Attendant Clear Alarm.....	19
Attendant CO Line External (Off-Net) Forward.....	19
Attendant Custom Message	20

Attendant Day/Night/Special	21
Attendant Directory List Programming.....	22
Attendant Disable Outgoing CO Line	25
Attendant Override.....	26
Attendant Setting Time and Date	26
Attendant Speed Dial - System Storing.....	27
Attendant Unavailable.....	28
Attendant Voice Mail Alarm Clear	28
Background Music (Optional)	29
Call Back.....	30
Call Coverage	31
Call Forward.....	33
Call Forward - External (Off-Net)	34
Call Forward - Follow Me	35
Call Park.....	37
Call Park - Personal.....	37
Call Park - Station.....	38
Call Park - System	39
Call Pickup.....	40
Directed Call Pickup.....	40
Group Call Pickup	41
Call Transfer.....	42
Executive/Secretary Transfer.....	42
PBX/Centrex Transfer	42
Screened Transfer.....	43
Transfer Search	44
Unanswered CO Call Transfer	44
Unscreened Transfer	44
Trunk-To-Trunk Transfer	45
Caller ID Display	46
Caller ID Display (Answered Calls).....	46
Caller ID Display (Unanswered Calls).....	46

Caller ID Name/Number	47
Calling Forward Override	48
Calling Station Handsfree Mode Override.....	48
Calling Station Tone Mode Override	49
Camp On.....	49
CO Line - Access.....	51
CO Line Queue.....	51
Conference	52
Conference Combinations	52
Conference Procedures.....	53
Dial-By-Name	56
Directory Dial	57
Do Not Disturb / Page Block.....	59
Executive Override.....	61
Flash	62
Flash Key on Intercom	62
Flexible Button Programming	62
Group Listening	63
Headset Mode	64
In and Out Button.....	65
Intercom	65
Using an Intercom Button	65
Answering an Intercom Call	66
Intercom Transfer	67
Intercom Calls	68
IP Phone.....	69
Keypad Mode.....	70
Last Number Redial.....	71
LCR Operation.....	72
Loop Key	73
Mailbox Buttons.....	73
Message Wait.....	74

Modem	76
Voice Mail Modem Access	76
Telephone System Modem Access	76
Mute	76
Name In Display	77
Night Service	78
Off-Hook Voice Over (OHVO)	78
Outside Calls.....	81
Placing an Outside Line on Hold.....	81
Answering a Recall	81
Answering an Outside Call	81
Placing an Outside Call	82
Paging.....	82
Paging - Meet Me.....	83
Personalized Messages.....	84
Pre-assigned Messages	84
Custom Messages.....	85
Date and Time Entry Messages	86
Scrollable Canned Messages	88
Personal Messages Flexible Button.....	89
PBX/Centrex Codes on a Flex Button	90
Release Button.....	90
Redial	90
Last Number Redial.....	90
Save Number For Redial.....	91
Redial a Saved Number	91
Repeat Redial	91
Ring Down/Hot Line/Off-Hook Preference	92
Ring Tone	94
School Zone.....	95
Speakerphone	97
Speed Dial	97


System Speed Dial Access	99
Station/Port Fixed Number.....	100
Station Relocate	100
Text Messaging (Silent Response)	101
Universal Day/Night Answer	102
Voice Mail	102
Call Forwarding to Voice Mail Groups.....	102
Retrieving Voice Messages.....	103
Voice Mail Transfer with ID Digits.....	103
Voice Mailbox Button.....	103
Voice Mail Group Button.....	104
Voice Mail Group Access	104
Voice Mail One-Touch Recording	104
Voice Mail (Flash-Based) Quick Reference	106
Voice Mail (Flash-Based) Quick Start	107
Volume Control	108
Worksheets	110
Default Numbering Plan	112

Digital Telephone Features

Vodavi Digital Telephones have flexible buttons and dual color LEDs that can be customized for each application.


- » When **flexible buttons** are used as DSS buttons, station status can be seen in a single glance. When they are used as CO/PBX/Centrex buttons, line status is easily monitored.
- » The integrated **speakerphone** offers call announce with hands-free intercom, and a hot keypad that allows dialing while the phone is on-hook.
- » Executive Display models include interactive **soft keys** that provide additional feature functionality.

30-Button Executive Telephone

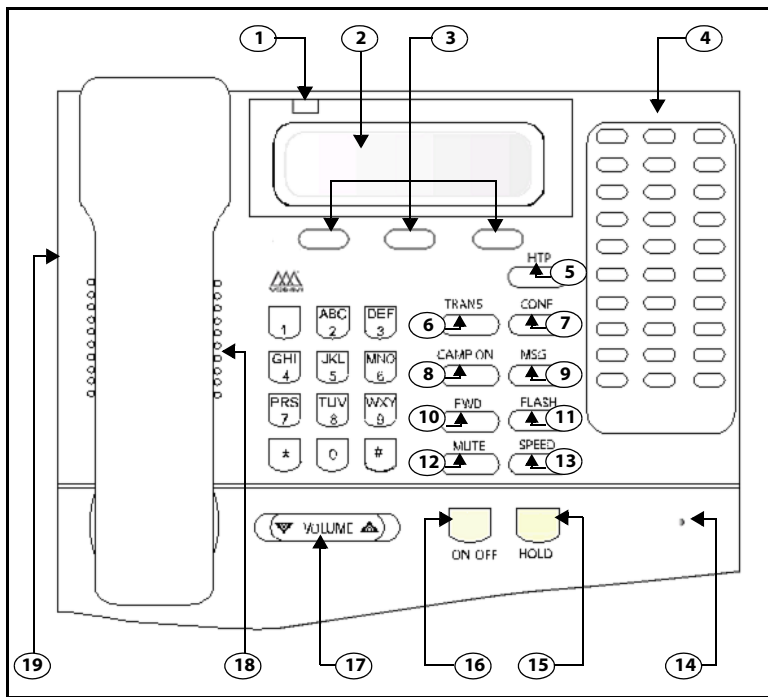


Number	Feature	Description
1	Message Indicator	Indicates that you have a message.
2	24-Character Display	Displays information about telephone status, dialing directories, and text message information.
3	Interactive Soft Keys	Works in conjunction with fixed & flexible features.
4	Flexible Button Keys	Used to access outside line or call-handling features.
5	H-T-P	Used to select mode of operation: Handsfree, Tone, or Privacy.
6	TRANS Key	Used to transfer an outside call from one station to another.
7	CONF Key	Used to establish conference calls.
8	CAMP ON	Used to alert a busy station that an outside line is on hold and waiting for them.
9	MSG Key	Used for Auto-CallBack to a telephone which has left a text message or to access voice messages.
10	FWD Key	Used to forward your calls to another station or voice mail.
11	FLASH Key	Used to end an outside call and to restore dial tone without hanging up receiver.
12	MUTE Key	Used to activate/deactivate MUTE function. When activated, party on other end cannot hear you.
13	SPEED Key	Used to access speed dialing, save number redial and last number redial. This button also is used to access flex button programming.
14	Microphone	Used to talk with other party without using the handset. One of the two Executive models includes Full Duplex capability.
15	HOLD Key	Used to hold calls, to retrieve held calls.
16	ON/OFF Key	Used to make a call without lifting the handset.
17	VOLUME Key	Used to adjust level of tones, background music, ringing, receiver volume, and display contrast.
18	Speaker	Outputs tones and voice at your extension.
19	Headset Jack	2.5 mm Headset Jack located on left side of phone.

8-Button Executive Telephone

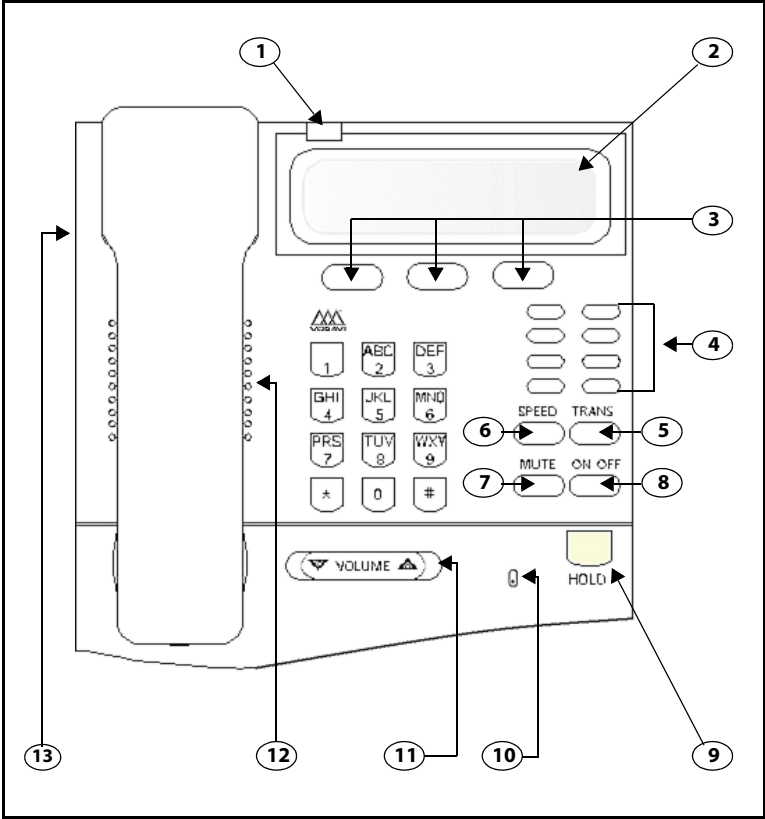


Number	Feature	Description
1	Message Indicator	Indicates that you have a message.
2	24-Character Display	Displays information about telephone status, dialing directories, and text message information.
3	Interactive Soft Keys	Used to program phone feature/functions.
4	Flexible Button Keys	Used to access outside lines or access call-handling features.
5	TRANS Key	Used to transfer an outside call between stations.
6	SPEED Key	Used to access speed dialing, save number redial and last number redial. This button also is used to access flex button programming.
7	MUTE Key	Used to activate/deactivate MUTE function. When activated, the party on other end cannot hear you.
8	ON/OFF Key	Used to make a call without lifting the handset.
9	HOLD Key	Used to hold calls, to retrieve held calls.
10	Microphone	Used to talk with other party without using the handset.
11	VOLUME Key	Used to adjust level of tones, background music, ringing, receiver volume, and display contrast.
12	Speaker	Outputs tones and voice at your extension.
13	Headset Jack	2.5 mm Headset Jack is located on the left side of the telephone.

8-Button Enhanced Telephone (Non-Display)

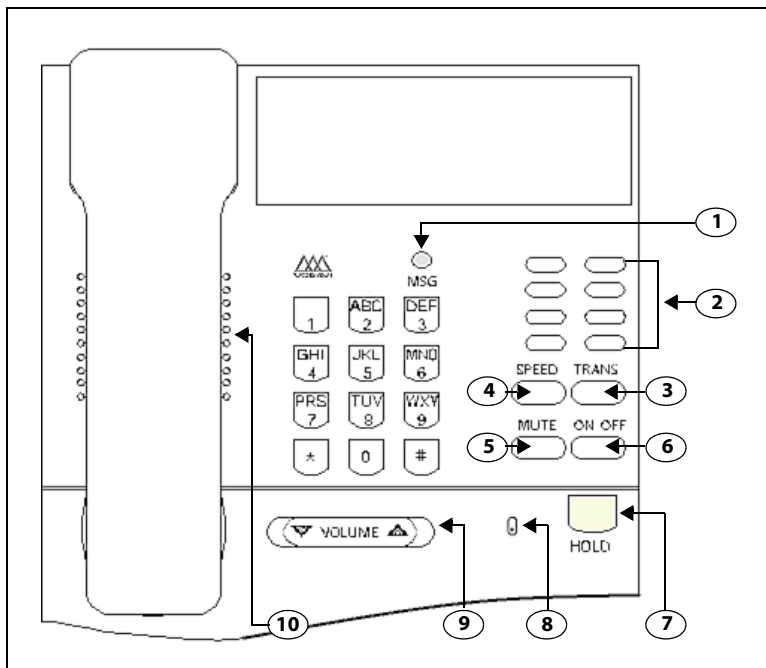

Number	Feature	Description
1	Message Indicator	Indicates that you have a message.
2	Flexible Button Keys	Used to access outside lines or access call-handling features.
3	TRANS Key	Used to transfer an outside call between stations.
4	SPEED Key	Used to access speed dialing, save number redial and last number redial. This button also is used to access flex button programming.
5	MUTE Key	Used to activate/deactivate MUTE function. When activated, the party on other end cannot hear you.
6	ON/OFF Key	Used to make a call without lifting the handset.
7	HOLD Key	Used to hold calls, to retrieve held calls.
8	Microphone	Used to talk with other party without using the handset.
9	VOLUME Key	Used to adjust level of tones, background music, ringing, receiver volume, and display contrast.
10	Speaker	Outputs tones and voice at your extension.

24-Button Executive Telephone

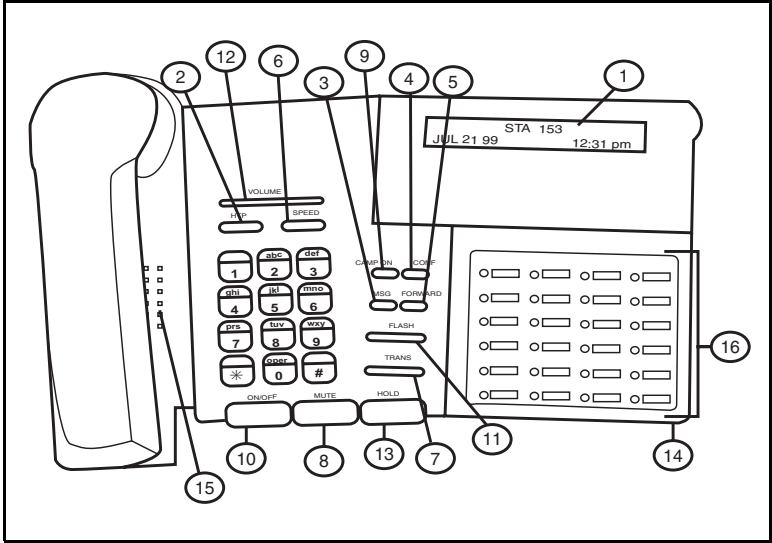


Number	Feature	Description
1	Display (Executive Models only)	Displays information about telephone status, dialing directories, and text message information.
2	h t p	Used to select mode of operation: Handsfree, Tone, or Privacy.
3	<i>msg</i> Key	Used for Auto-CallBack to a phone that has left a text message or to access voice messages.
4	<i>conf</i> Key	Used to establish conference calls.
5	<i>forward</i> Key	Used to forward your calls to another station or voice mail.
6	<i>speed</i> Key	Used to access speed dialing, save number redial, and last number redial. Buton is also used to access flexible button programming.
7	<i>trans</i> Key	Used to transfer an outside call from one station to another.
8	<i>mute</i> Key	Used to activate/deactivate MUTE function. When activated, party on other end cannot hear you.
9	camp-on Key	Used to alert a busy station that an outside line is on hold and waiting for them.
10	<i>on/off</i> Key	Used to make a call without lifting the handset.
11	<i>flash</i> Key	Used to end an outside call and to restore dial tone without hanging up receiver.
12	<i>volume</i> Key	Used to adjust level of tones, background music, ringing, receiver volume, and display contrast.
13	<i>hold</i> Key	Used to hold calls, to retrieve held calls.
14	Microphone	Used to talk with other party without using the handset.
15	Speaker	Outputs tones and voice at your extension.
16	Flexible Button Keys	Used to access outside lines or access call-handling features.

24-Button IP Telephone

FIXED BUTTONS

- | | | | |
|---|-------|---|------------|
| — | TRANS | — | REDIAL |
| — | FWD | — | CONF |
| — | DND | — | MSG/CALLBK |
| — | MUTE | — | FLASH |
| — | ICM | — | PGM |
| — | SPEED | — | SAVE |

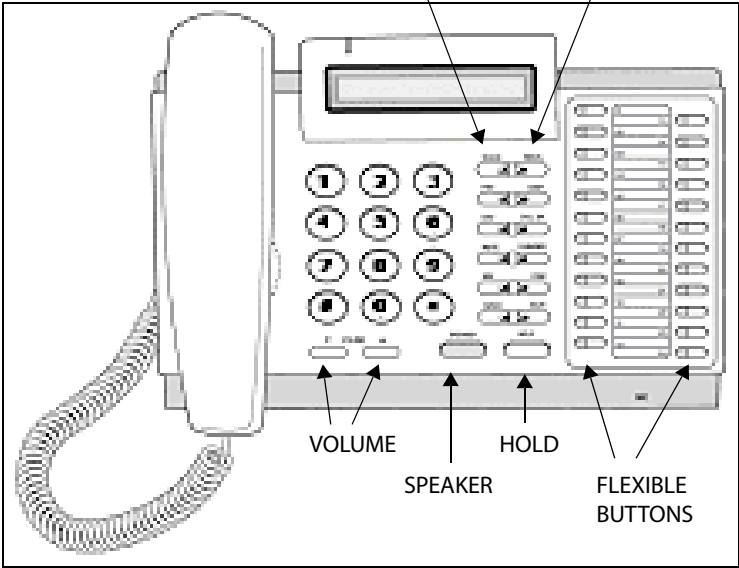

Features	Description
CONF	Used to establish conference calls.
DND	Used to prevent calls from ringing at your station when on a call or busy. Also can be used to activate a Page Block feature.
FLASH	Used to end an outside call and to restore dial tone without hanging up the receiver.
FWD	Use to send unanswered calls to another station, Hunt group, or voice mailbox.
HOLD	Used to hold calls and to retrieve held calls.
ICM	Not used at this time.
MSG / CALLBK	Used for Auto-CallBack to a phone that has left a text message or to access voice messages.
MUTE	Used to activate/deactivate MUTE function. When activated, the party on the other end cannot hear you.
PGM	Used as a rotary to select mode of operation: Handsfree (LED not lit), Tone (LED lit solid), or Privacy(LED blinking).
REDIAL	Used to access and dial the last number dialed.
SAVE	Not used at this time.
SPEED	Used to access speed dialing, save number redial, and last number redial. Button is also used to access flexible button programming.
SPEAKER	Used to make a call without lifting the handset. Serves as an ON/OFF button.
TRANS	Used to transfer intercom or outside call from one station to another.
VOLUME	Used to adjust level of tones, ringing, and receiver volume.
24 Flexible Buttons	Used to access outside lines or call-handling features.

ABOUT THIS USER GUIDE

The features described in this book apply to the **XTS** Digital Telephone Systems when using Vodavi Telephones ... unless an exception is specifically noted.

GUIDELINES

Flexible Buttons -- Most system features can be set up on a flexible button for easy one-button access (for more details, refer to [“Flexible Button Programming” on page 62](#)).

This “Flex Btn” symbol indicates those features that need a *preprogrammed* button to function properly (IP Phones have several fixed feature buttons that can be used instead).



- EXCEPTION -

When the “Soft Key” symbol is also present, you may use either a *preprogrammed* button or a Soft Key.



Flexible Numbering -- This feature allows the system numbering plan to be modified, as well as the length of the feature access codes (2-4 digits).

For consistency, the following programming and operating procedures refer to “3-digit” default codes.

To verify the numbering plan for your system, consult with your System Administrator.

Single Line Telephones -- A “telephone” symbol appears when the Single Line Telephone (SLT) operation differs from the Digital Telephone. If your single line telephone does not have a FLASH key, quickly press and release the hookswitch when instructed to press the FLASH key.



911 Alert



Any station user or Attendant who programs a flexible button for 911 ALERT (feature code 608) will be alerted of internal stations placing 911 calls. The system can store the 16 most recent 911 calls. Calling information includes the time/date of the call and the station number from which the call was placed. The initial 911 Alert indicators include:

- Audible ringing tone
- Green flashing 911 ALERT flexible button LED
- Automatic LCD display of 911 call information

E911 CALL XX: STA XXXX MM/DD/YY HH:MM
--

XX = Index number (01-16)

Station users and Attendants can press the flexible button as necessary to view additional 911 call information in the stored list. Once a station user or Attendant views the data for all 911 calls in the system list:

 
- LEDs at all stations will change to a solid red indication.
- Audible ringing tone at all stations ceases.
- LCDs at all stations will revert to a normal display.

The list remains available for review by pressing the 911 ALERT flexible button until all messages are deleted.

To delete logged 911 Alert messages:

An Attendant must use the following steps to delete the messages on a system-wide basis.

1. Press the 911 ALERT flexible button to display the 911 call information for deletion.
2. Press FLASH to delete that message.



Dialing 911 from any station overrides previously enabled features such as Do Not Disturb.

Account Codes

Using Account Codes



Prior to placing, or during, an outside line call:

1. Press the *preprogrammed* ACCOUNT CODE button (627).
2. Dial account code up to 12 digits. (The other party does not hear the digits being dialed).
 - If account code is less than 12 digits, an [*] must be entered to return to the call.
 - If account codes are forced, the account code must be entered prior to dialing the outside number.
3. Dial [9] or CO Access code. A dial tone will sound.
4. Dial the desired number.

Verified Account Codes



Prior to placing an outside line call:

 
1. Press the *preprogrammed* ACCOUNT CODE button (627).
2. Dial account code up to 12 digits.



SINGLE LINE TELEPHONE

To enter an Account Code before a call:

1. Lift the handset.
2. Dial [627].
3. Dial the account code.




If the account code contains fewer than 12 digits, dial [] to automatically return to the call.*

4. Dial [9] or CO Access code. A dial tone will sound.
5. Dial the desired number.

To enter an Account Code during a call:

 1. Press the FLASH button. Call is placed on executive hold while you enter your account code.
2. Dial [627].
3. Dial the account code.




If the account code contains fewer than 12 digits, dial [*] to automatically return to the call.

Account Codes - Traveling COS (Verified)



To use Verified Account Codes:

 1. Press the *preprogrammed* ACCOUNT CODE button (627) before accessing a CO line.
2. Dial account code up to 12-digits. If account code matches a verified account code, intercom dial tone is returned. Otherwise an error tone is presented.
3. Access an outside CO line, or dial the LCR code, and then dial the desired number.




SMDR must be enabled for the Account Code feature to operate, and become part of the SMDR record.



SINGLE LINE TELEPHONE

To enter an Account Code before a call:

 1. Lift the handset.
2. Dial [627].
3. Dial account code.



If Account Code contains fewer than 12 digits, dial [*] to return to intercom dial tone.

4. Dial [9] or CO Access code. A dial tone will sound.
5. Dial desired number.

ACD/UCD

The Automatic Call Distribution (ACD) feature is available with optional software. When purchased, Uniform Call Distribution (UCD) is not used and is replaced by the ACD functions.

ACD Call Factor



The Call Factor feature is used exclusively with digital voice mail to provide average call duration to the caller. This feature can be activated from administration or the ACD supervisor can use a flexible button [580]+[ACD group number]+ [FFF] (FFF=Call Factor) to enter the factor (average call duration).

This formula is used to calculate the average call duration:

$$\frac{\text{(Place in Queue) (Call Factor)}}{\text{Number of Agents Logged into Group}}$$

 Number of Agents Logged into Group

ACD Call Qualifier



While agent is on a call:

1. Press the *preprogrammed* CALL QUALIFIER flexible button, followed by the qualifier code.
2. If the qualifier code has less than 12 digits, enter a [*] to complete the sequence. A confirmation tone sounds.

-or-

Press the one-touch *preprogrammed* CALL QUALIFIER flexible button.



The *Discovery Manager* reporting package will only receive up to the first 4 digits of the qualifier code.

To create a CALL QUALIFIER flexible button:

1. Press SPEED twice.
2. Press the button to be programmed (must be programmed in database as a flexible button).
3. Dial the CALL QUALIFIER feature code [570] and then press [#]. A confirmation tone will sound.
4. Press the ON/OFF button (SPEAKER button on IP Phone).

To create a one-touch CALL QUALIFIER flexible button:

1. Press SPEED twice.
2. Press the button to be programmed (must be programmed in database as a flexible button).
3. Dial the CALL QUALIFIER feature code [570] + [YYY] (YYY= the last three digits of a desired speed bin 9000-9099, that has been preprogrammed with a qualifier code). A confirmation tone will sound.
4. Press the ON/OFF button (SPEAKER button on IP Phone).

ACD Help

While on a call in progress, the following results will occur when an Agent presses their *preprogrammed* HELP flexible button.

AGENT

The Agent will hear a confirmation tone and their HELP button will illuminate if a supervisor is logged into their ACD group.

If no supervisor is logged in, the Agent will receive an error tone and the HELP button will not illuminate.

SUPERVISOR

An ACD supervisor station will receive a Help message when an ACD member in the same group initiates a Help request.

- This function will also send a Camp-On tone to the supervisor's keyset speaker. A Help message will take precedence over other messages. The supervisor can clear the message by pressing their HELP button.

- At the time the supervisor receives a Help request, they can press their HELP flexible button followed by the OVERRIDE feature button to bridge onto the ACD group member's call.
- Once the HELP button is pressed, an intercom call is placed to the station requesting Help, and Help message will be cleared. The Help message will also be cleared if the agent was on a call and went back on-hook before the supervisor could respond. In this case, Help message converts to message wait indication. (The Agent can also clear the Help request by pressing their HELP button a second time.)



SINGLE LINE TELEPHONE

While on a call-in-progress, the agent:

Presses the FLASH button and then dials the HELP code [574] on the dial pad. The agent must press FLASH again to return to their call after the code is dialed.

ACD Member Status

Any station (Supervisor or Agent) logged onto the ACD group can view the status of the ACD group members as follows:

1. Dial ACD Group Member Status code [573] on the dial pad,
-or-

Press the *preprogrammed* flexible button. The display will show:
ACD Group 5XX (XX=ACD group #).

The status of the ACD agents is displayed with a letter following the station number where the agent is logged in.

ACD5XX: 110A 111A 112A 113O 114U 115D 116B 117N
--

N = Not Equipped U = Unavailable
D = Do not Disturb B = Busy on a call
O = Out of service A = Available

NOTE -- If an Agent makes a call while out of service, their status is out of service, not busy.

2. Press [*] to scroll up to the next ACD Group.
If more than eight members are in the ACD group, the next depression of the [*] displays the additional members,
3. Press [#] to scroll down to the previous ACD Group.
To return to an idle display, the Supervisor/Agent station must go on-hook.

ACD Overflow Available/Unavailable

To place a station in Available Mode:

Dial [578] on the dial pad to start receiving ACD calls,

-or-

Press the *preprogrammed* AVAILABLE/UNAVAILABLE button.

To place a station in Unavailable Mode:

Dial [578] on the dial pad to block incoming ACD calls,

-or-

Press the *preprogrammed* AVAILABLE/UNAVAILABLE button.

ACD Login/Logout

To log into an ACD Primary Group:

1. Dial LOGIN CODE [572] on the dial pad, followed by the desired ACD group number (5XX),
-or-
2. Enter your four-digit AGENT ID code (0000-9999).
The LOGIN flexible button LED will light steady and a confirmation tone will sound to verify the login process.
 - The ON/OFF LED (SPEAKER button LED on IP Phone) will extinguish if the login sequence was started in the handsfree mode.
 - The ACD Agent Login LED will only light for the ACD group that is assigned to that button.

To log out of an ACD Primary Group:

Dial LOGOUT CODE [571] on the dial pad,

-or-

Press the *preprogrammed* LOGOUT flexible button. The LOGIN flexible button LED will extinguish.

To log into an ACD Secondary Group:

1. Dial LOGIN CODE [582] on the dial pad, followed by the desired ACD group number (5XX),

-or-

Press the *preprogrammed* LOGIN flexible button.

2. Enter your four-digit AGENT ID code (0000-9999).

The LOGIN flexible button LED will light steady and a confirmation tone will sound to verify the login process.

- The ON/OFF LED (SPEAKER button LED on IP Phone) will extinguish if the login sequence was started in the handsfree mode.
- The ACD Agent Login LED will only light for the ACD group that is assigned to that button.

To log out of an ACD Secondary Group:

Dial LOGOUT CODE [581] on the dial pad,

-or-

Press the *preprogrammed* LOGOUT flexible button. The LOGIN flexible button LED will extinguish.

ACD Supervisor Display

To view the ACD Supervisor Display:

Dial the ACD Supervisor Display code [577] on the dial pad, followed by the ACD group (5XX) you want to observe,

-or-

Press the *preprogrammed* flexible button.

The ACD Supervisor Display shows the following:

5XX: CIQ: XX AGENTS: XX
OC: HH:MM:SS

5XX = ACD Group (534-565 or 550-565 for XTSc)

CIQ: XX = Calls in queue

AGENT(S): XX = Agents logged in

OC: hh:mm:ss = Oldest call in hours, minutes, and seconds

To change the display to a different group:

Dial the ACD Supervisor Display code [577] on the dial pad, followed by the ACD group you want to observe,

-or-

Press the *preprogrammed* flexible button.

ACD Supervisor Login/Logout

To log in to an ACD group:

1. Dial LOGIN CODE [576] on the dial pad, followed by the desired ACD group number (5XX),

-or-

Press the *preprogrammed* LOGIN flexible button. (Flexible button must have [576]+[5XX] programmed onto it.)

2. Enter your 4-digit SUPERVISOR ID code (0000-9999).

The LOGIN flexible button LED will light steady and a confirmation tone will sound to verify the login process.

 
- If active, an ACD login event will also be sent to the ACD Events Trace port.
- If the login sequence was started in the handsfree mode, the ON/OFF LED (SPEAKER button LED on IP Phone) will extinguish.

To log out of an ACD group:

Dial LOGOUT CODE [575] on the dial pad, followed by the appropriate ACD group number (5XX),

-or-

Press the *preprogrammed* LOGIN/LOGOUT flexible button, the LED will extinguish.



ACD Supervisor Log-in LED only lights for ACD group assigned to that button.

 
The same flexible button can be used to toggle the Login/Logout feature.

Supervisor Monitor with Barge-In

The ACD Supervisor Monitor with Barge-In feature provides a means for an ACD Supervisor to monitor an agent's call.

Up to five supervisors per ACD group can simultaneously monitor / listen in to an agent's call by pressing a *preprogrammed* flexible feature button (feature code 583). The supervisors are able to monitor both sides of the conversation, but they are not able to talk with either party while in this mode.

A warning tone is available to alert parties that someone is monitoring their call.



Executive Override is a system feature and, therefore, takes precedence over this feature. If Supervisor Monitor with Barge-In is used properly, Executive Override MUST be disabled.

A change in volume may occur on the CO line or intercom call after the barge-in occurs.



The use of Supervisor Monitor with Barge-In is limited by federal law and may also be limited or prohibited by state or local law, so check the relevant laws in your area before employing these features.

Up to five ACD supervisors can simultaneously monitor an agent's call as follows:

1. Dial the agent's station number. Receive a busy signal.
2. Press the *preprogrammed* Supervisor Monitor flexible button (feature code 583). The supervisor is able to hear the conversation of both parties and the Supervisor's LCD displays the following:

MONITORING XXXX MMM DD YY HH:MM: am

3. Replace the handset or press ON/OFF (SPEAKER button on IP Phone) to terminate Supervisor Monitoring.

Conditions

- » Supervisors can only Barge-In on calls of ACD group members of the group into which they are logged.

Supervisor One-Touch Record

Description

This feature allows a supervisor, who monitors/barges-into an ACD call, to record the conversation into their voice mailbox (XTS systems only).

Operation

- While monitoring an ACD call, press the *preprogrammed* One-Touch Record button (feature code 649).
- To stop or to pause recording and to resume recording after a pause, press the *preprogrammed* Pause/Resume button (feature code 655).
- When the call concludes, the recording ceases.

Conditions

- » The supervisor must be logged in as a supervisor of the ACD group.
- » The ACD agent's station must be programmed to enable Supervisor Monitor/Barge-In.
- » The Supervisor must have a One-Touch Record button.

ACD/UCD Available/Unavailable

If you are an ACD/UCD Agent, you can place your station in the Available mode to receive ACD/UCD calls or in the Unavailable mode to block ACD/UCD calls from ringing to your station.

If the enhanced mode is enabled in administrative database programming, agents can specify the reason for their unavailable status. This enhanced feature is used in conjunction with the *Discovery ACD* product.

To make a station available/unavailable (normal mode):

Dial the ACD Available/Unavailable feature code [566] on the dial pad,

-or-

Press the *preprogrammed* AVAILABLE/UNAVAILABLE button to toggle between being in an available or unavailable status.

To make a station available/unavailable (enhanced mode):

1. Make a *preprogrammed* AVAILABLE/UNAVAILABLE button by pressing [SPEED] + [SPEED] + dial [566] + dial a unique identifier code (0-9, #, or * that will be sent to the PC ACD trace for *Discovery ACD* use).
2. Press the *preprogrammed* AVAILABLE/UNAVAILABLE button to toggle between being in an available or unavailable status.

ACD Calls In Queue Status Display

There are two methods for stations not assigned to the ACD Group to monitor the ACD Calls In Queue Status Display.

First Method -- From an idle key telephone:

1. Dial [567] on the dial pad,
-or-
Press the *preprogrammed* flexible button.
2. Dial the ACD group number (5XX). The ON/OFF button LED (SPEAKER button LED on IP Phone) will light steady.
This idle display will show how many calls are in queue.

ACD5XX 00 CALLS IN QUEUE MMM DD YY HH:MM am

5XX = ACD Group Number (534-565 or 550-565 for XTSc)

3. Replace the handset or press ON/OFF (SPEAKER button on IP Phone) to terminate the display.

Second Method -- From an idle key telephone:

The *preprogrammed* flexible button for the ACD group being monitored will flash, indicating there are calls in queue.

1. Press the *preprogrammed* ACD CALLS IN QUEUE DISPLAY flexible button.
This idle display shows how many calls are in queue.

ACD5XX 00 CALLS IN QUEUE MMM DD YY HH:MM am

5XX = ACD Group Number (534-565 or 550-565 for XTSc)

2. Replace the handset, or press ON/OFF (SPEAKER button on IP Phone) to terminate display.

To assign an ACD CALLS IN QUEUE DISPLAY flexible button:

Dial [579]+[XXX].

(XXX = ACD group number 534-565 or 550-565 for *XTSc*)

ACD/UCD Wrapup End

An agent that wants to override the Wrapup Timer and immediately go back into an available ACD/UCD status can use a *preprogrammed* WRAPUP END flexible button.

 
To override the Wrapup Timer:

1. Preprogram a WRAPUP END flexible button using feature code 584.
2. Press the *preprogrammed* WRAPUP END flexible button.

UCD Calls In Queue Display

From an idle display key telephone:

1. Dial [567],
-or-
Press the *preprogrammed* flexible button.
2. Dial the desired UCD group number (550-565). The ON/OFF button LED (SPEAKER button LED on IP Phone) will light steady.
 - This idle display prompts a Supervisor that a group is having problems answering their calls.
 - The display tells the agent and their supervisor how many calls are in queue.
 - The agent automatically receives the calls in queue display whenever there is a call in queue.
3. Replace the handset or press ON/OFF (SPEAKER button on IP Phone) to terminate display.



This feature cannot be used with a call in progress. The station is considered busy for incoming calls during this operation.

UCD Overflow Station Forward

An enhancement allows UCD calls reaching the Overflow Station to call forward to another station:

1. Lift the handset or press the ON/OFF button (SPEAKER button on IP Phone).
2. Press the FWD button or dial [640].
3. Dial the desired code:
[6] = All Calls [8] = Busy
[7] = No Answer [9] = Busy/No Answer
4. Dial the 3- or 4-digit destination number where calls are to be forwarded (Station, Voice Mail, UCD group, Hunt group). A confirmation tone will sound.
5. Replace the handset or press the ON/OFF button (SPEAKER button on IP Phone).

To remove call forwarding:

1. Lift the handset or press the ON/OFF button (SPEAKER button on IP Phone).
2. Press the FWD button. A confirmation tone will sound and the FWD LED will extinguish.

Alternate Dial Plan

When you use an MPBE, the 3-digit default dial plan uses station numbering of 100-419 (320 stations) and feature code numbering beginning with feature code 420 as shown in the [“Default Numbering Plan” on page 112](#). When your system has more than 320 stations, default station numbering would cause conflicts with default feature code numbering. For example, physical station number 321 would be station 420 in the default numbering plan, and this conflicts with VM Msg Set default feature code of 420.

The Alternate Dial Plan programming feature is used when your system has more than 320 stations (using an MPBE). The default Alternate Dial Plan uses station numbering of 100-591 (492 stations) and feature code numbering that uses the 3-digit default dial plan with a leading digit of 8, resulting in a 4-digit feature code plan. For example, the VM Msg Set default feature code of 420 becomes 8420. Feature code numbering under the default Alternate Dial Plan is as described above with the following exceptions:

- ❑ 6540 (Answering Machine Emulation w/ringing) is changed to 8665
- ❑ 6541 (Answering Machine Emulation w/speaker) is changed to 8666
- ❑ 88 (CO Line Direct Access) is changed to 8888
- ❑ 89 (Loop Key) is changed to 8889

The Alternate Dial Plan does not apply to MPB1 or MPB2 systems.

Answering Machine Emulation



When a call is sent to your voice mailbox, you can press a *preprogrammed* flexible button to listen to the caller leaving the voice mail message. If you decide to speak with the caller, you can press the *preprogrammed* button to be connected to the caller.

Notification Methods

There are two methods of notification, a Ring Mode or a Speaker Mode. These methods are controlled by the type of flexible button assigned on the telephone.

The *preprogrammed* button type defines the operation mode (654+0=Ring Mode, 654+1=Spkr Mode; 8665=Ring Mode - Alt Dial Plan, 8666=Spkr Mode - Alt Dial Plan). An incoming CO call rings at a station and forwards (except busy type) to the station's VM mailbox.

Ring Mode

The *preprogrammed* flexible button flashes red while the caller is in your mailbox. You can press the flashing button and the audio is broadcast over the speaker of the keyset. The MUTE key is also enabled and the LED lights solid red. When the call is ringing the station in the ring mode, the display shows:

```
VM SCREENING RING
MMM DD YY    HH:MM am
```

Speaker Mode

The VM message is broadcast over the speaker. The MUTE key is enabled and the LED lights solid red. When the station is monitoring the caller in VM, the display shows.

```
VM SCREENING
MMM DD YY    HH:MM am
```

MAILBOX Options

The Mailbox Owner can select from the following options when a call is sent to their voice mailbox.

To leave caller in VM and turn off speaker:

Press the ON/OFF button (SPEAKER button on IP Phone) and continue to listen to message being left without taking action at the keyset. After the VM message is left, the *preprogrammed* button will be solid red and the keyset will return to idle.

To talk to party leaving the message:

Press the MUTE key. Station is still in CONF and caller can hear VM and you.

To pick up call:

Press the flexible button. When the call is picked up, the voice mail system will disconnect from the call.

Attendant Features

If your station is designated as the Attendant station, the following features are available to assist you in efficiently operating your telephone.

Attendant Clear Alarm

The Attendant can dial feature code [606] to clear any alarm. This function does not clear the condition, only the display.

Attendant CO Line External (Off-Net) Forward

To activate off-net forwarding:

1. Dial [603] on the dial pad,
-or-
2. Press the *preprogrammed* CO OFF-NET FORWARD button.

3. Dial the CO group access code of group to be forwarded:
[801-823] = CO Group 1-23
[824] = All CO Groups
4. Dial the speed bin number that contains the number where calls are to forward. A confirmation tone will sound.

To cancel off-net forwarding:

1. Dial [603] on the dial pad,
-or-
Press *preprogrammed* CO OFF-NET FORWARD button.
2. Dial the CO group access code.
3. Dial [#] on the dial pad. A confirmation tone will sound.

Attendant Custom Message

Program the ten custom messages for system-wide use at the first Attendant station as follows:

1. Dial the Custom Message program code [694] on the dial pad. The following message displays:

```
ENTER MSG NO  
MMM DD YY           HH:MM am
```

2. Enter a valid message bin number [21-30]. The following message displays after the bin number has been selected.

```
mmmmmmmmmmmm...  
ENTER MSG:
```

- Enter the letters for the custom message using the dial pad keys as shown:

<table border="1"> <tr> <td style="text-align: center; font-size: 24pt;">1</td> <td>A - 21 B - 22 C - 23</td> <td>D - 31 E - 32 F - 33</td> </tr> <tr> <td>G - 41 H - 42 I - 43</td> <td>J - 51 K - 52 L - 53</td> <td>M - 61 N - 62 O - 63</td> </tr> <tr> <td>P - 71 R - 72 S - 73 Q - 74</td> <td>T - 81 U - 82 V - 83</td> <td>W - 91 X - 92 Y - 93 Z - 94</td> </tr> <tr> <td style="text-align: center;">*</td> <td>OPER 0</td> <td style="text-align: center;">#</td> </tr> </table>	1	A - 21 B - 22 C - 23	D - 31 E - 32 F - 33	G - 41 H - 42 I - 43	J - 51 K - 52 L - 53	M - 61 N - 62 O - 63	P - 71 R - 72 S - 73 Q - 74	T - 81 U - 82 V - 83	W - 91 X - 92 Y - 93 Z - 94	*	OPER 0	#	Other Codes			
	1	A - 21 B - 22 C - 23	D - 31 E - 32 F - 33													
	G - 41 H - 42 I - 43	J - 51 K - 52 L - 53	M - 61 N - 62 O - 63													
	P - 71 R - 72 S - 73 Q - 74	T - 81 U - 82 V - 83	W - 91 X - 92 Y - 93 Z - 94													
	*	OPER 0	#													
	1 = 1#	8 = 8#	" = 01	* = *#												
	2 = 2#	9 = 9#	, = 02	(= #1												
3 = 3#	0 = 0#	? = 03) = #2													
4 = 4#	Space = 11	/ = 04	+ = #3													
5 = 5#	: = 12	! = *1	= = #4													
6 = 6#	- = 13	\$ = *2	# = ##													
7 = 7#	' = 14	& = *4	. = 24													

- Up to 24 alphanumeric characters may be entered (represents 48 digits). Characters display when entered.
 - Attendant must go idle after programming a message before another message may be programmed.
- Press the HOLD button to enter message. A confirmation tone will sound.

Attendant Day/Night/Special



OR



The system's Automatic Night Mode Feature can be overridden by the Attendant station. Any Attendant station user can press their DND button or a Soft Key to place the system into Night Mode.



The Night Service feature provides a means to place the system in night mode or remove the system from night mode from any keyset, providing the system was put in night mode by the night service feature flexible button [604].

If the system was placed in night mode by the Attendant using the DND button, or if the system was placed in night mode by the automatic schedule, the night service flexible button cannot remove the system from night mode.

Directory List

The following procedure is used to enter, edit, and erase names in the Directory List for stations or speed dial numbers.

To modify the Directory List:

1. Enter the desired 3-digit Directory List number (000-199), or dial [*] to scroll up (next entry) or [#] to scroll down (previous entry) through the list.
If changing a name already associated with an existing station, skip to Step 4.
2. Press TRANS.
3. Enter the 3- or 4-digit station intercom number.
4. Press the MUTE button.
5. Enter the name (up to 24 characters may be entered) by using the keys. The display updates as the name is entered.

			Other Codes			
1	A - 21 B - 22 C - 23	D - 31 E - 32 F - 33	1 = 1#	8 = 8#	" = 01	* = *#
G - 41 H - 42 I - 43	J - 51 K - 52 L - 53	M - 61 N - 62 O - 63	2 = 2#	9 = 9#	, = 02	(= #1
P - 71 R - 72 S - 73 Q - 74	T - 81 U - 82 V - 83	W - 91 X - 92 Y - 93 Z - 94	3 = 3#	0 = 0#	? = 03) = #2
*	OPER	#	4 = 4#	Space = 11	/ = 04	+ = #3
0			5 = 5#	: = 12	! = *1	= = #4
			6 = 6#	- = 13	\$ = *2	# = ##
			7 = 7#	' = 14	& = *4	. = 24

6. Press SPEED when finished. A confirmation tone sounds and the display shows the new or changed name.
7. Press HOLD, then use [*] or [#] to scroll to next entry.
-or-
Hang up to end programming.

To clear an entry:

1. Select the desired entry.
2. Press the TRANS button, then press FLASH.
3. Press SPEED, a confirmation tone will sound and the entry is erased.

 
Local Translation Table

The following procedure is used to associate names to the Local Number/Name Translation Table number only.

To add names to Local Translation number:

1. Enter desired three-digit Directory List number (000-199), or dial [*] to scroll up (next entry) or [#] to scroll down (previous entry) through the list.
If just changing a name associated with an existing Table entry, skip to Step 4.
2. Press TRANS.
3. Dial three-digit Local Number/Name Translation Table number (600-799) that represents the desired telephone number.
4. Press MUTE.
5. Use the keys on the dial pad to enter the name (up to 24 characters may be entered).

The display updates as the name is entered.



If an error is made during keystroke entry, press FLASH to clear the current name.

6. Press SPEED when finished. Confirmation tone sounds and the display shows the new or changed name.
7. Press HOLD, then use [*] or [#] to scroll to next entry.

-or-

Hang up to end programming.

Speed Dial Bin

The following procedure is used to associate names to a system speed dial bin only.

To add names to a System Speed Bin:

1. Enter desired 3-digit Directory List number (000-199), or dial [*] to scroll up (next entry) or [#] to scroll down (previous entry) through the list. (If changing a name already associated with an existing System Speed Dial Bin entry, skip to Step 4.)
2. Press TRANS.
3. Dial system speed dial bin location (9020-9999 or 9020-9099 for *XTSc*).
4. Press MUTE.
5. Use keys on the dial pad to enter the name (up to 24 characters may be entered). The display updates as the name is entered.
6. Press SPEED when finished. Confirmation tone sounds and the display updates.
7. Press HOLD, then use [*] or [#] to scroll to next entry.
-or-
Hang up to end programming.

Attendant Disable Outgoing CO Line

The first Attendant can disable CO lines to prevent outgoing access to those lines.

To disable CO Lines:

1. Lift the handset, or press the ON/OFF button (SPEAKER button on IP Phone).
2. Dial [602] on the dial pad. A confirmation tone will sound.
3. Press the line button(s) of the CO Line(s) to disable. The CO Line button(s) LED flashes; a confirmation tone sounds.

To reactivate the CO Line(s):

Repeat Steps 1-3 to disable this feature.

Attendant Override



When Attendant Override is enabled, Attendant stations may override or call stations that are busy or in Do Not Disturb.

To call a station busy on a CO call:

Press the *preprogrammed* ATTN OVERRIDE button [601]. Three short tone bursts are presented to the called party.

After five (5) seconds, the station's CO line is automatically placed on hold and the Attendant is cut-through.

To call a station in Do Not Disturb mode:

Press the *preprogrammed* ATTN OVERRIDE button. The station is signaled with a Camp On tone.

Attendant Setting Time and Date

System Time/Date must be set by the first programmed Attendant via admin programming or using feature code 692.

To set using the feature code:

1. Dial [692] on the dial pad. A confirmation tone will sound.
2. Enter date and time as follows: YYMMDDHHMM

YY = Year (00-99)

HH = Hour (00-23)

MM = Month (01-12)

MM = Minute (00-59)

DD = Day (01-31)

When the correct number of digits are entered, a confirmation tone will sound.

3. Press the ON/OFF button (SPEAKER button on IP Phone) to OFF to update the display.

Attendant Speed Dial - System Storing

System Speed numbers must be entered by the first programmed Attendant. If an Attendant is not specified, enter at Station 100.

1. Press SPEED once, then press the desired outside line key,
-or-
Press SPEED twice to select an outside line automatically.
2. Dial the System Speed bin location (9020-9999 or 9020-9099 for *XTSc*).
3. Dial telephone number.
4. Press SPEED.
5. Hang up.

Speed Dial Options

To use the following speed dial options, enter as shown:

 
Initiate a Pulse-To-Tone Switchover Press TRANS during number entry.

Insert a Pause Press HOLD during number entry.

Insert a Flash into the Speed Number Press FLASH.

Insert a Non-Display Character Press TRANS as the first entry in the speed bin.

This causes the numbers stored in the bin not to display on the Digital Telephones when the bin is accessed.



Speed Bin numbers 9060-9099 are not monitored by Toll Restriction.

Attendant Unavailable

The Attendant Unavailable feature lets Attendant stations have a button that places their station in an Unavailable Mode. When the station is in the Unavailable Mode, the next Attendant station receives dial “0” calls and recalls.

To activate Unavailable Mode:

As the (first programmed) Attendant ...

Press the *preprogrammed* UNAVAILABLE flexible button,

-or-

Dial the Attendant Unavailable code [607] on the dial pad, and the following results occur:

- The flexible button LED will light solid, if programmed.
- Recalls and dial “0” calls will ring at the second Attendant’s station.
- If the second Attendant places their phone in unavailable, the third Attendant will receive recalls and dial “0” calls, and so forth through the sixth Attendant.

To deactivate Unavailable Mode:

As the (first programmed) Attendant ...

Repeat activation process shown above (press Unavailable button or dial code 607), the following results will occur:

- The flexible button LED, if programmed, will extinguish.
- The first Attendant will resume normal operation.
- The second through sixth Attendants will not receive recalls or dial “0” calls.

Attendant Voice Mail Alarm Clear

The Attendant display shows an alarm condition when the system detects that the digital voice mail is out of service.

Dial feature code [656] to clear any alarm from the display. This function does not clear the condition, only the display.

Background Music (Optional)



To activate Background Music:

1. Dial [632] or press the *preprogrammed* BGM flexible button, then enter desired channel number on the keypad.

-or-

Use the Soft Key's BGM option.

0:OFF	1/2/3: CH-1/2/3
MMM DD YY	HH:MM am

LCD Display for XTS Systems

0:OFF	1:CH-1	2:CH-2
MMM DD YY	HH:MM am	

LCD Display for XTS_c Systems

A confirmation tone will sound, and music is audible through the speaker.

2. Press Volume Bar to change the volume. The LCD displays:

SPEAKER BGM [#####]
MMM DD YY HH:MM am

To deactivate Background Music:

1. Dial [632] again or press BGM flexible button, then enter [0].

-or-

 
Use the Soft Key's BGM option.

2. A confirmation tone will sound and music will discontinue.



SINGLE LINE TELEPHONE

The Background Music feature is not compatible with SLTs.



IP Phones do not support the Background Music feature.

 
Call Back



A station can initiate a call back request to another busy station. Once that station becomes idle, the station that left the call back request is signaled.

To leave a Call Back request when a number is busy:

1. Either press the *preprogrammed* CALL BACK flexible button or use the Soft Key's CALL-BK option (press the MSG/CALLBK button on IP Phone).
2. Replace the handset or press the ON/OFF button (SPEAKER button on IP Phone). When the busy station hangs up, you will be signaled.
3. Answer the call; the station you called will then be signaled. (If your station is busy when signaled, an automatic MSG will be placed at your phone.) Only one Call Back request can be left at a station; the second request will leave a message wait callback request.




When the Automatic Call Back Timer is enabled, a call back request is automatically invoked anytime you listen to a busy intercom tone for a preset period of time (default = 10 seconds).



SINGLE LINE TELEPHONE

To leave a Call Back request when a number is busy:

 1. Press the FLASH button.
2. Dial [622] and replace the handset.



Only one Call Back request can be left at a station; the second request will convert to a message waiting request.

Call Coverage



The Call Coverage feature provides the functionality for stations to answer calls for other stations by utilizing call coverage buttons. Visual and Audible status of ringing stations to an assigned coverage station are provided.

To assign a Call Coverage Button:

1. Press [SPEED] + [SPEED].
2. Press a desired flexible button.
3. Dial [647] for Non-Ringing or [646] for Ringing, followed by the station number to cover. A confirmation tone will sound.

After a button is assigned, and that station receives a call:

1. You will receive audible and/or visual indications after a programmable period of time: an internal ring tone, and/or the same flash rate as the incoming CO line ringing rate.
 - Ringing option = ringing, flashing Call Coverage LED, LCD display as in following illustration:

CALL FOR STA XXXX
MMM DD YY HH:MM am

- Non-Ringing option = flashing Call Coverage LED only (no ringing or change to LCD)

2. Then press the flashing COVERAGE flexible button,
-or-
Press the ON/OFF button (SPEAKER button on IP Phone).
The call is answered and will cease to ring at any other stations that may have the same coverage appearance.
After the call is answered, one of the following messages will display:

Non-network system or in same Node:

CALL FOR STA XXXX FROM STA YYYY HH:MM:SS
--

Network system with call passed across a switch:

XXXXXXXXXX CALLING YYYYYY HH:MM:SS
--

XXXXXXXXXX = Name of calling party

YYYYYY = Specific CO Line type being used (e.g., PRI #23)

HH:MM:SS = Amount of time on the call



SINGLE LINE TELEPHONE

This feature can cover SLT extensions, however an SLT cannot perform the call coverage function. The SLT extension need not be physically installed, only the SLT card must be installed.

Call Forward



The Call Forward feature allows a station to have internal or external calls forwarded to a designated station, an ACD or UCD group pilot number, Voice Mail group number, or Hunt group. This feature must be enabled in Admin Programming.

To activate Call Forwarding:

1. Lift the handset or press the ON/OFF button (SPEAKER button on IP Phone), press the FWD button or dial [640], then dial the appropriate forwarding condition code.

[6] = All Calls

[8] = Busy

[7] = No Answer

[9] = Busy/No Answer

-or-

Use the applicable Soft Key's ALL-FWD, N/A-FWD, BSY-FWD, or B/NA-FWD option.

2. Press the DSS button of desired station,

-or-

Dial the desired extension number where to forward calls, including ACD or UCD, Voice Mail, Hunt Group pilot numbers and Speed Dial bins for off-net forwarding.

3. Replace the handset or press the ON/OFF button (SPEAKER button on IP Phone).

To remove Call Forwarding:

1. Lift the handset, or press the ON/OFF button (SPEAKER button on IP Phone).
2. Either press the FWD button, dial [640] or [662], or use the Soft Key's CLR-FWD option. A confirmation tone sounds and the FWD LED extinguishes.



SINGLE LINE TELEPHONE

The SLT operation uses the same procedures as used in Digital Telephone operation described above, except there is no FWD button or Soft Keys. You must use feature codes 640 and 662.

Call Forward - External (Off-Net)

Stations are allowed to forward intercom and transferred CO line calls to an off-net location. The Call Forward Off-Net feature allows a station to reroute calls that would normally be lost. Calls can be forwarded to home or another off-net site. Initially ringing CO calls cannot be forwarded with this feature.

To activate Off-Net Call Forwarding:

1. Lift handset or press ON/OFF button (SPEAKER button on IP Phone).
2. Press the FWD button or dial [640] on the dial pad.
3. Press the desired *preprogrammed* speed bin flexible button. A confirmation tone sounds and the FWD button LED is Red Steady On.
4. Replace handset; ON/OFF button (SPEAKER button on IP Phone) extinguishes automatically, if used instead of handset.
-or-
1. Lift handset or press ON/OFF button (SPEAKER button on IP Phone).
2. Press the FWD button or dial [640] on the dial pad.
3. Dial [*] on the dial pad. Dial the station/system speed bin number that contains the number where calls are to be forwarded. A confirmation tone sounds and the FWD button LED is Red Steady On.
4. Replace handset; ON/OFF button (SPEAKER button on IP Phone) extinguishes automatically, if used instead of handset.

To remove Off-Net Call Forwarding:

1. Lift the handset or press ON/OFF (SPEAKER button on IP Phone).
2. Press the FWD button or dial either [640] or [662]. A confirmation tone sounds and the FWD LED extinguishes.



SINGLE LINE TELEPHONE

The SLT operation uses the same procedures as used in Digital Telephone operation described above, except there is no FWD button. The user must use the 640 feature code to activate and 662 to clear.

Call Forward - Follow Me

The Follow Me feature lets a user who is away from their station, activate/deactivate call forwarding from another station in the system. This lets the user forward their calls to their current location or into Voice Mail, ACD/UCD, Hunt Group, any other station in the system, or to an off-net location. When this call forward is activated, all calls presented to the forwarded station forward to the destination station immediately.

To activate Follow Me Call Forwarding:

1. Lift the handset or press the ON/OFF button (SPEAKER button on IP Phone).
2. Dial the Follow Me Forward code [642] on the dial pad.
3. Dial station number of the station from which forwarding is desired.
4. Dial the appropriate forwarding condition code.
[6] = All Calls [8] = Busy [*] = Off-Net
[7] = No Answer [9] = Busy/No Answer
5. Dial the three- or four-digit destination number where calls are to be forwarded (Station, Voice Mail, ACD/UCD, Hunt Group, or speed bin (only for off-net)).
6. Replace the handset or press the ON/OFF button (SPEAKER button on IP Phone).

To remove Follow Me Call Forwarding:

1. Lift the handset or press the ON/OFF button (SPEAKER button on IP Phone).
2. Dial the Follow Me Forward code [642] on the dial pad.
3. Dial the station number of the station that forwarding is to be cancelled.
4. Dial [6] (regardless of the forward condition).
5. Redial the same station number. Confirmation tone sounds and FWD LED extinguishes.

To establish Follow Me Call Forwarding (off-site location):

1. Dial into the system on a DISA or TIE trunk. Enter the DISA access code, if applicable.
2. Dial the Follow Me Forward code [642] on the dial pad.
3. Dial the station number of the station from which forwarding is desired.
4. Dial the appropriate forwarding condition code.
[6] = All Calls [8] = Busy [*] = Off-Net
[7] = No Answer [9] = Busy/No Answer
5. Dial the three- or four-digit destination number where calls are to be forwarded (System Speed Bin (off-net only), Station, Voice Mail, ACD/UCD, or Hunt Group). A confirmation tone sounds; five seconds later a dial tone is received.

To remove Follow Me Call Forwarding (off-site location):

1. Dial into the system on a DISA or TIE trunk. Enter the DISA access code, if applicable.
2. Dial the Follow Me Forward code [642] on the dial pad.
3. Dial the station number of the station that forwarding is to be cancelled.
4. Dial [6] (regardless of the forward condition).
5. Redial the same station number. Confirmation tone sounds; 5 secs later = dial tone.

Call Park

Call Park - Personal

Each digital telephone in the system can place a call into a personal park location and then later retrieve that call from the originating station. Internal calls and external calls can be placed into the stations' personal park location. Calls parked in a personal park location are subject to the system call park recall timer.

To park a call:

1. Press the TRANS button. The caller is put on Exclusive Hold.
2. Dial the Personal Park location code [438] on the dial pad,
-or-
Press the *preprogrammed* PERSONAL PARK button. A dial tone will sound.

To retrieve a parked call:

Dial Personal Call Park location code [438] on the dial pad,
-or-
Press the *preprogrammed* PERSONAL PARK button. A talk path will be established between the two parties.



SINGLE LINE TELEPHONE

To park a call:

1. Press the FLASH button. A dial tone will sound.
2. Dial [438]. The call is placed in personal park.

To retrieve a parked call:

Dial [438]. The call is returned.

Conditions

- » If the Call Park user receives or makes a second call while the first call is parked, the user can alternately connect to the two calls by pressing the *preprogrammed* PERSONAL PARK button or by dialing [438].

Call Park - Station

Call park (by station number) allows external calls to be parked at a station other than your own.

To park a call:

1. Press the TRANS button. The call is put on Exclusive Hold.
2. Dial [439] + [XXX] (XXX=station number).

-or-

1. Press the TRANS button. The call is put on Exclusive Hold.
2. Press the *preprogrammed* CALL PARK (Station) button.
3. Dial [XXX] (XXX = station number).

To retrieve a parked call:

Dial [# 6] + [XXX] (XXX = the station number used to park the call) while at any telephone in the system, including the initiator's.

-or-

Dial [438] from the initiator's station.

To create a CALL PARK (Station) button:

1. Press [SPEED] + [SPEED].
2. Press the desired flexible button.
3. Dial [439] + [#]. A confirmation tone sounds.



SINGLE LINE TELEPHONE

The SLT user cannot park a call using the Call Park - Station feature. The SLT user can retrieve a Call Park - Station call by using the [#6] procedure in the digital keyset section above.

Call Park - System

An external call can be placed into one of 14 parking locations and can be retrieved by any station that has a direct line appearance or an available Loop button. Parked calls have their own recall timer that recalls the originating station, and if still unanswered, the Attendant(s).

To park a call, either:

1. Press the TRANS button. The caller will be put on hold.
2. Dial the parking location (424-437=XTS, 430-437=XTSc). A confirmation tone will sound.
3. If a busy tone is received, press TRANS twice and dial another park location, or press the CALL PARK flexible button for a different parking location.

-or-

1. Press the CALL PARK flexible button. The caller will be parked at the location programmed on the button.
2. If a busy tone is received, press TRANS twice and dial another park location, or press the CALL PARK flexible button for a different parking location.

To retrieve a parked call, either:

1. Lift the handset or press the ON/OFF button (SPEAKER button on IP Phone).
2. Press [#].
3. Dial parking location (424-437=XTS, 430-437=XTSc) where call was parked, or press the *preprogrammed* PARKED CALL PICKUP flexible button.

-or-

Use the Soft Key's P-PKP 1 option when in an idle condition (to pickup from park location 1 only).

To create a PARKED CALL PICKUP button:

1. Press [SPEED] + [SPEED].
2. Press the desired flexible button.
3. Dial [#] + the desired parking location (424-437=XTS, 430-437=XTSc).



SINGLE LINE TELEPHONE

To park a call:

1. Press the FLASH button. The caller is put on Exclusive Hold.
2. Dial parking location (424-437=XTS, 430-437=XTSc). A confirmation tone will sound.
3. If busy, press the FLASH button twice and dial another park location.

To retrieve a parked call:

1. Lift the handset and press the [#] button.
2. Dial parking location (424 to 437) where call was parked.

Call Pickup

A station can pickup a call ringing to any specific unattended station by using the Directed Call Pickup procedure.

A station can pickup a call ringing to an unattended station within the same ACD/UCD group by using the Group Call Pickup procedure.

Directed Call Pickup



To create a Pickup Button:

1. Press [SPEED] + [SPEED].
2. Press the desired flexible button, then dial #0.

To use Directed Call Pickup:

 
1. Dial the station number of the known ringing telephone. Receive ringback tone or call announce tone depending on the intercom selector switch setting.
2. Press the *preprogrammed* PICKUP button to answer the call.



SINGLE LINE TELEPHONE

To use Directed Call Pickup:

1. Lift the handset.
2. Dial [#1].
3. Dial station number of ringing telephone.



You *MUST* have access to the specific outside line or a LOOP button to do a directed call pickup.

Group Call Pickup

To create a Pickup Button:

1. Press [SPEED] + [SPEED].
2. Press the desired flexible button.
3. Dial #0.

To use Group Call Pickup:

 
1. Lift the handset or press the ON/OFF button (SPEAKER button on IP Phone).
2. Dial [#0] on the dial pad,
-or-
Press *preprogrammed* PICKUP button to answer call.



SINGLE LINE TELEPHONE

To use Group Call Pickup:

1. Lift the handset.
2. Dial [#0]. You will be connected to the incoming intercom or outside line call.



You must be in the same Pickup group as the ringing telephone to pickup the call.

You MUST have access to the specific outside line or LOOP button to use Group Call Pickup.

Call Transfer

Outside lines can be transferred from one phone to another within the system. The transfer can be either screened (announced) or unscreened to either an idle or busy station, an ACD/UCD Group, or a Hunt Group. Outside line calls can also be transferred to another outside destination by using a trunk-to-trunk transfer.

Executive/Secretary Transfer

If you are designated the:

- Executive station, and your phone is busy or in DND, all calls will be routed to the Secretary station.
- Secretary station, you can signal the Executive that is busy or in DND by using the Camp On feature.

PBX/Centrex Transfer

While connected to an outside line (PBX/Centrex):

1. Press FLASH. The transfer dial tone sounds.
2. Dial the PBX/Centrex station number.
3. Hang up to complete the transfer.



SINGLE LINE TELEPHONE

To make a PBX/Centrex Transfer:

1. Press the FLASH button. An intercom dial tone will sound.
2. Dial [660]. A Flash command is presented to the PBX or Centrex CO Line (a stutter tone will sound).
3. Dial the desired telephone number.
4. Replace the handset to complete the transfer.

 
*Screened Transfer**To conduct the transfer, while connected to an outside line:*

1. Press the station button where call is to be transferred (if programmed on your telephone) or press TRANS and dial station number.
The called extension signals according to the selected intercom H, T, or P mode.
2. When that extension answers, announce the transfer.
3. Hang up to complete the transfer.

To answer the Screened Transfer:

Your intercom will be signaling according to the selected intercom H-T-P mode.

1. Answer the intercom and receive the transfer notice.
2. Press OUTSIDE LINE or flashing LOOP button on hold.



If Direct Transfer is enabled, the screened transfer will go directly to the handset. You do not have to press a LINE or LOOP button to answer.

Transfer Search

When attempting to locate a party:

1. Press a station DSS button to signal the station or press TRANS and dial desired station.
2. If the station is unavailable, press another station DSS button to enter a new station number or press TRANS twice and dial the station number.
3. When the station answers, hang up to complete transfer.

Unanswered CO Call Transfer

While idle or on an internal/external call and an incoming or transferred CO call is ringing at your station:

1. If on another call, place the current call on hold and replace the handset or press ON/OFF (SPEAKER button on IP Phone).
2. Dial the INC CO XSFR code [639] or press *preprogrammed* INC CO XSFR flexible button.
3. Press a DSS, Group button, or dial a station or group number. Call automatically transfers to that destination.
4. You can then return to the call placed on hold.

Unscreened Transfer

1. Press the TRANS button.
2. When the called extension begins to signal, hang up to transfer the call (the Recall Timer start).
3. Replace the handset or press the ON/OFF button (SPEAKER button on IP Phone).

Trunk-To-Trunk Transfer

While connected to an outside line (PBX/Centrex):

1. Press TRANS. The transfer dial tone sounds.
2. Press a CO line / Loop flexible button.
-or-
Dial [9].
-or-
Dial a CO line/group access code.
3. Dial the desired outside line destination number.
4. Hang up to complete the transfer.



 
*E911 feature enabled precludes dial 9 access.
LCR feature enabled precludes Loop button access.*



SINGLE LINE TELEPHONE

While connected to an outside line (PBX/Centrex):

1. Press the FLASH button. A dial tone will sound.
2. Dial [9].
-or-
Dial a CO line/group access code.
3. Dial the desired outside line destination number.
4. Hang up to complete the transfer.



E911 feature enabled precludes dial 9 access.

Caller ID Display

Caller ID Display (Answered Calls)

The Answered Caller ID Table feature can store up to 100 (*XTSc/MPB1*), 250 (*MPB2*), or 1000 (*MPBE*) system-wide entries of the most recently answered calls with caller ID. A station may dial a unique access code to view the entries, scroll through the entries, and dial a desired entry back. The table displays the caller ID number and the identity of the station that answered the call.

This table may be accessed from any user station display phone. Any Attendant station can delete a table entry, one entry at a time.

To start the review process at the beginning of the table:

Dial [659].

Refer to the table in the next section for navigation instructions.

Caller ID Display (Unanswered Calls)

An Unanswered Call Management Table with 100 (*XTSc/MPB1*), 250 (*MPB2*), or 1000 (*MPBE*) system-wide entry capacity is maintained in the system. The calling number/name information pertaining to any unanswered call is placed in this table at the time the system determines the call was abandoned.

This table may be accessed from any display telephone to review unanswered calls. Only an Attendant station(s) can delete an entry from this table.

To start the review process at the beginning of the table:

Dial [635].

Keypad Functions

The following functions apply to both Answered and Unanswered Call Management Tables:

Function	Button
Review next item in table entry	MUTE
Step to next table entry	HOLD
Delete table entry (Attendant only)	FLASH
Exit table review function	ON/OFF (SPEAKER for IP Phone)
Step to previous table entry	TRANS
Call Back	SPEED

Caller ID Name/Number



This feature allows you to program a flexible button [653] to view both the number and name on the LCD when receiving a Caller ID CO call. When the feature is enabled, the flexible button LED is lit solid and the name and number is displayed.

During the call, press the flexible button to toggle between the normal call information display and the name/number display.

The top line of the LCD displays the number of the caller and the bottom line of the LCD displays the name.

Calling Forward Override

The Call Forward Override feature allows a user to reach a busy station that is call forwarded. This allows the calling station to override the forwarding which allows the user to use Off Hook Voice Over (OHVO), Executive Override, Monitor, Message Wait Indication, Camp On, or Call Back Request at that station rather than forwarding to another destination.

1. Dial [5#] followed by the desired station extension.
2. Press the appropriate *preprogrammed* button.
 - Call Back = [622]
 - Camp On = [620]
 - Executive Override = [625]
 - Message Wait = [623]
 - OHVO = [628]

Calling Station Handsfree Mode Override

This feature enables a calling station to override a called station's T intercom setting.

When placing a call to a station and handsfree is desired:

1. Dial [7#] on the dial pad.
2. Dial the extension number,
 - or-
 - Press the DSS button of desired station (call connects to the station in a handsfree mode).

 
Calling Station Tone Mode Override

This feature enables a calling station to override a called station's H or P intercom settings.

When placing a call to a station and tone ringing is desired:

1. Dial [6#] on the dial pad.
2. Dial the extension number,
-or-
Press the DSS button of the desired station (call tone rings station).

Camp On




A station may alert a busy party that an outside line is on hold and waiting for them by using the CAMP ON button. To camp on a call, press the TRANS button to transfer the call to the desired busy station, then press the CAMP ON button. The busy party receives a muted ring over the keyset speaker, and a visual flashing CAMP ON LED. By pressing the CAMP ON button, the person called places their existing outside call on hold and is connected to the person placing the Camp On. They can then pick up the call on the appropriate line.

To alert a busy station of your call:

1. Press the CAMP ON button,
-or-
Use the Soft Key's CAMP-ON option.
The called station will receive one burst of ringing.

 2. When the called party answers, consult with them or hang up to transfer call.



If a station is in DND, only the Attendant can Camp On using the Attendant override feature. Camp On or Override drops any internal callers to which that station is talking.

To answer a call that is waiting:

1. Press your flashing CAMP ON button when you hear one burst of muted ringing. Any outside line you are connected to will be placed on hold.
2. Converse with the station placing the call,
-or-

If a call is being transferred, press the flashing OUTSIDE LINE button.
If you do not have a CAMP ON button:

- Go on-hook with your present call, the Camp On call will ring through,
-or-
- Place the present call on hold, then go on-hook, the Camp On call will ring through.



SINGLE LINE TELEPHONE

To alert a busy station of your call:

1. Press the FLASH button.
2. Dial [620]. When the called line is alerted, they can choose to pick up your call or remain on original call.

To answer a call that is waiting (while on a CO line call):

1. Receive Camp On warning tone through the handset.
2. Choose desired call (hang up on present call and take new call, or ignore Camp On signal).

CO Line - Access

To access an outside line:

1. Press an idle CO line button or a POOL button,
-or-
Dial a CO line group access code or an LCR code: 9, 801-823, 88+LLL (LLL = CO Line number). Use 8888+LLL if using an Alt Dialing Plan.
2. Dial the desired number for outside call.
3. Lift the handset to converse or use the speakerphone.



SINGLE LINE TELEPHONE

To access an outside line:

1. Lift the handset.
2. Dial access code: 9, 801-823, 88+LLL (LLL = CO line number). Use 8888+LLL if using an Alt Dialing Plan.
3. Dial telephone number.

CO Line Queue



If you wish to be placed on a waiting list for a particular outside line that is busy, to become available:

1. Press desired busy OUTSIDE LINE button,
-or-
Press the POOL button. (A busy tone will sound.)
2. Press the *preprogrammed* CO LINE QUEUE button (621).
3. Replace the handset or press the ON/OFF button (SPEAKER button on IP Phone).

To answer a queue:

If you hear ringing and an outside line of the line group or a LOOP button you queued onto is rapidly flashing:

1. Lift the handset or press the ON/OFF button (SPEAKER button on IP Phone).
2. Press the flashing OUTSIDE LINE button, or LOOP button.

To cancel a call back request:

1. Dial the CO Line Queue Cancel code [626] on the dial pad.
2. Replace the handset or press the ON/OFF button (SPEAKER button on IP Phone).



SINGLE LINE TELEPHONE

1. Dial an outside line access code, a busy tone will sound.
2. Press the FLASH button.
3. Dial [621]. A confirmation tone will sound.

Conference



Conference Combinations

Only stations that have conference enabled can institute a conference.

Add-On Conference -- Up to eight internal parties can engage in a conference, or seven internal parties with one external party. A maximum of five 8-party conferences (five external parties maximum) can be established.

Multi-Line Conference -- One internal station can engage in a conference with up to four outside parties.



A maximum of eight parties can be included in a conference.

Conference Procedures

8-button digital telephones can assign a Conference button by using feature code 624.

To establish a Conference:

1. Lift the handset.
2. Select an intercom station or dial desired outside party.
3. When called party answers, press the CONF button.
4. Add the next conference party by selecting another outside line or intercom station, or by using the Soft Key's ADD MEM option.
5. If the next conference party is an outside line and a busy or wrong number is encountered, press one of the conference parties on hold. This drops the busy or wrong number party. Press the conference button again and repeat Step 4.
6. When the last party answers, press the CONF button twice (All parties will be connected).

To exit a Conference (controller only):

For a Single-line conference ...

1. Press the ON/OFF button (SPEAKER button on IP Phone) to ON.
2. Press the MUTE button, then replace the handset to monitor the conference.

For a Multi-line conference ...

1. Press the HOLD button to place outside parties on hold. The Hold Timer starts. If one of the two parties is internal, that party is dropped.
2. Either press CONF and hang up or press the ON/OFF button (SPEAKER button on IP Phone) or use the Soft Key's EXIT option to leave the other conference parties still connected in an unsupervised conference. The CONF button flashes and the timer starts. There is a warning tone before the other parties are dropped.

To re-enter a Conference:

When the controller re-enters the conference, the disconnect timer is reset.

1. Lift the handset to re-enter a monitored conference.
2. To re-enter a conference placed on hold, repeat the steps for establishing a conference.
3. To re-enter an unsupervised conference, lift the handset and press the flashing CONF button or use the Soft Key's RE-ENTER option. The CONF button will light steady and a confirmation tone will sound.

To terminate a Conference, the conference initiator who is actively in the conference must:

Replace the handset or press the ON/OFF button (SPEAKER button on IP Phone) to OFF.

To terminate an Unsupervised Conference:

Press the flashing CONF button or use the Soft Key's END option while on-hook, all parties will be dropped.

To terminate a party during a Conference call:

1. Press the line button of the party you wish to drop.
2. Replace the handset, or press the ON/OFF button (SPEAKER button on IP Phone).
3. Lift the handset, or press the ON/OFF button (SPEAKER button on IP Phone).
4. Press the flashing CONF button.



SINGLE LINE TELEPHONE

To set up a Conference with one external and one other internal station:

1. Make outside call.
2. Press the FLASH button to put the call on hold.
3. Dial number of internal station you wish to add.
4. When the station answers, press the FLASH button again. All three parties are connected.

To set up a Conference with Personal Park:

1. While connected to an outside line, press the FLASH button. The intercom dial tone will sound.
2. Dial [438]. The first call will be placed in personal park.
3. Dial the desired number for the second call.
4. Press the FLASH button. The Intercom dial tone will sound.
5. Dial the code for SLT Conference Park [664]. All three parties will be conferenced.
6. Hang up to terminate the conference.


Dial-By-Name

The system allows station users to dial extension numbers, or speed bins, by entering the name of a person that has been programmed for that station.

The system database allows entry of a name (alphanumeric) up to 24 characters in length for each station. The programmed name can be used for dial-by-name station users and in directory dialing.

(NOTE ... This feature should not be confused with the *Name In Display* function.)

1. Dial the Dial-By-Name code [6*] on the dial pad, -or-
Press the *preprogrammed* DIAL-BY-NAME flexible button.
2. Dial the person's last name on the keypad as shown.

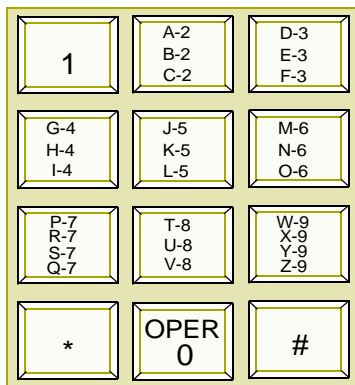

Example ...

To search for the name BROWN, press [2] [7] [6] [9] [6].

When the system finds a numeric match for the name being dialed:

- ❑ A call will be placed to the station matching the name.
- ❑ An intercom call will signal the station according to the intercom mode selected: H, T, or P.
- ❑ If fewer than 8 digits are dialed, the numeric match is dialed after a 10-second interdigit time-out occurs, or when the [#] key is pressed.

Directory Dial

Display telephone users may view a list of up to 200 names from the System Directory on the station's LCD display. You can dial the station or speed dial bin by pressing a single button.


Names placed in the Directory List may be associated to intercom numbers, System Speed dial bins, or entries in the Local Number/Name Translation Table. You may view the Directory List beginning with any letter of the alphabet, then scroll through the list either forward or backwards.

Directory Dialing may also be used to transfer a call from one station to another.


To view the Directory List:

1. Dial the Directory List dial code [680] on the dial pad,
-or-
Press flexible button programmed as a directory dialing button,
-or-
Use the Soft Key's DIR-DIAL option when in an idle condition.
2. Press a button on the keypad that represents the letter of the alphabet to begin viewing the list of names.
Example ... pressing 2 once will produce names starting with A. When 2 is pressed a second time, names that start with B will display. Pressing 2 a third time will display names that start with C.

3. The alphabet is represented on the keypad as shown:

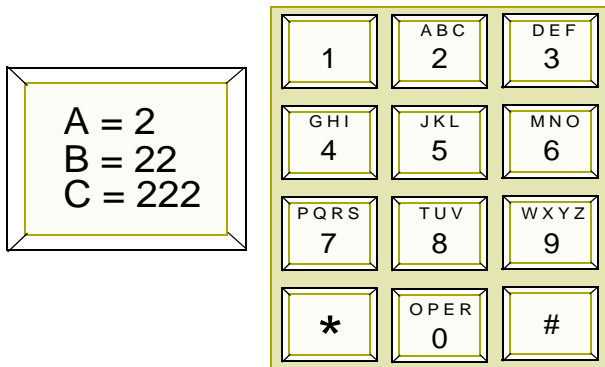

 Names beginning with the letter chosen will show on the LCD display.




*If there are no names in the Directory List beginning with the desired letter, a name with the next higher letter displays on the LCD display.
Letters "Q" and "Z" are not marked on many telephone keypads; however, the illustration above shows the correct keys used to access these letters.*

4. Dial [*] to scroll up (next entry) through the list,
-or-
Dial [#] to scroll down (previous entry) through the list,
-or-
Press another key to view the list for a different letter of the alphabet.
5. When the desired name displays on the LCD, press the SPEED button to automatically dial the destination station or outside phone number (via speed dial).

To transfer a call using Directory Dialing while on a call:

 1. Press the TRANS button.
2. Dial the Directory Dial Code [680] on the dial pad,
-or-
Press the flexible button programmed for directory dialing.
3. Press digit associated with person's name, when it displays, press SPEED to automatically dial destination station.
4. Hang up to complete the transfer.



Calls may be transferred to internal stations only. An attempt to transfer a call off-net (via a speed dial bin) results in the call recalling upon going on-hook.



SINGLE LINE TELEPHONE

Not applicable

Do Not Disturb / Page Block



To activate Do Not Disturb:

Press the *preprogrammed* DND button once (DND button lights steady). The DND button can be pressed while the phone is ringing to stop the ringing.

-or-

Use the Soft Key's DND option when in an idle condition.

-or-

Press the DND fixed feature button on the IP Phone (DND button lights steady).

To activate Page Blocking:

Press the *preprogrammed* DND button a second time (DND button flashes).

-or-

Use the Soft Key's DND option a second time when in an idle condition.

-or-

Press the DND fixed feature button on the IP Phone a second time (DND button flashes).

To remove Do Not Disturb:

Press the *preprogrammed* DND button a third time (DND fixed feature button on the IP Phone), use the Soft Key's DND option a third time, or dial either [631] or [662]. The button LED extinguishes and DND cancels.

To activate One-time Do Not Disturb:

Press *preprogrammed* DND button while you are off-hook and connected to a CO line or intercom call (DND fixed feature button on the IP Phone). The DND button LED will light, and off-hook tones at your station are cancelled.

To cancel One-time Do Not Disturb:

Replace the handset. The DND button LED will extinguish and DND will be cancelled.



SINGLE LINE TELEPHONE

To activate Do Not Disturb:

1. Lift the handset.
2. Dial [631].
3. Replace the handset.

To remove Do Not Disturb:

1. Lift the handset.
2. Dial [631] or [662].
3. Replace the handset.

Executive Override



Use of this feature when the executive override warning tone is disabled may be a violation of Federal, State or Local Laws, and an invasion of privacy. Check applicable laws in your area before using this feature.

Executive Override allows stations designated as “Executive” the ability to override and “barge in” on other keysets engaged in CO Line conversations. A change in volume may occur on the CO Line or intercom call after the barge-in occurs.

If you call a busy station:

1. Press the *preprogrammed* EXECUTIVE OVERRIDE button (625). The Executive station is bridged onto the CO line conversation in progress at the called station. An optional warning tone is presented to all parties prior to cut-thru.
 - The conversation in progress is received on the Supervisor’s handset and the Executiver’s MUTE button LED is lit to indicate that the Executive’s transmit is muted.
 - To participate in the conversation in a true conference mode, the Executive can press the MUTE button to remove the mute condition.
2. Replace the Executive station handset to terminate the override.

Flash

When connected to an outside line:

Press FLASH to disconnect the outside line and reseize an outside line dial tone.

» » » 8-button telephone users can assign a FLASH button by using code [660].

Flash Key on Intercom

When connected to a page zone or another internal party:

Press FLASH to disconnect page or intercom call. An intercom dial tone will sound.

Flexible Button Programming

To program a flexible button (to use feature codes):

1. Press SPEED twice.
2. Press the button to be programmed (must be programmed in database as a flexible button).
3. Dial the desired code (refer to the ["Default Numbering Plan" on page 112](#), and the feature's description for any additional digits to enter). A confirmation tone will sound.
4. Press the ON/OFF button (SPEAKER button on IP Phone).

To program a flexible button (to use speed bin dialing):

1. Press SPEED twice.
2. Press the button to be programmed (must be programmed in database as a flexible button).
3. Press the SPEED button.
4. Dial the speed bin number. A confirmation tone will sound.
5. Press the ON/OFF button (SPEAKER button on IP Phone).

To erase a flexible button:

1. Press SPEED twice.
2. Press the flexible button to be erased.
3. Press FLASH. A confirmation tone will sound.
4. Press the ON/OFF button (SPEAKER button on IP Phone).

To check flexible button programming:

1. Lift the handset.
2. Press SPEED, then dial [7] + [#].
3. Dial [2] to select the KEYBTN option.
4. Press the desired flexible button(s) to display programming for the button(s) on the LCD.
5. When finished, replace the handset.

Group Listening

All digital key stations have a built-in speakerphone. You can use the speaker to monitor a call while using the handset to consult with the outside party. This enables other people in the room to listen to both parties in the conversation.

 
To activate Group Listening:

While conversing on the handset, press the ON/OFF button (SPEAKER button on IP Phone).

Both parties of the conversation can then be heard on the digital station's speaker. The speakerphone microphone is muted while the handset is off-hook.

To deactivate Group Listening:

While off-hook, press the ON/OFF button (SPEAKER button on IP Phone).



Group Listening is NOT available when the station is in the Headset Mode.

Headset Mode



A modular headset may be used by connecting the headset to the handset jack on the keyset (leaving the handset in place). A headset can also be connected to the 2.5 mm jack that is located on the left side of most Vodavi digital telephone models. The ON/OFF button on the digital telephone (SPEAKER button on IP Phone) is used to initiate and end calls while using the headset.

To activate Headset Mode:

Dial [634] on the dial pad,

 
-or-

Press the *preprogrammed* HEADSET MODE button.

-or-

Use the Soft Key's HEADSET option when in an idle condition.

The LED will light steady.



While Headset mode is active, the ON/OFF button (SPEAKER button on the IP Phone) activates the headset and disables speakerphone and intercom call announce operation at your station.

To install the headset, see the Installation Manual.

To deactivate Headset Mode:

Dial [634] on the dial pad,

 
-or-

Press the *preprogrammed* HEADSET MODE button.

-or-

Use the Soft Key's HEADSET option when in an idle condition.

The LED will extinguish.



Station must be programmed in database programming for headset operation before the flexible button can be programmed.



SINGLE LINE TELEPHONE

Not applicable

In and Out Button



An In and Out Button will toggle a station from an in status to an out status and from an out status to an in status. When in an out status, the LCD will display “STA IN OUT OF OFFICE” and all incoming calls will forward to the Preset Internal Busy Forward destination (Flash 50/51, Page C, Button #2). If no forwarding destination is programmed in Flash 50/51, the call will be presented without forwarding. Attendant stations and SLT stations do not have the In and Out feature capability.

To change In and Out status:

Press the *preprogrammed* In and Out Button (feature code 644).

Intercom

Using an Intercom Button



To program a Flexible Button as an Intercom Button:

1. Press the SPEED button twice.
2. Press the desired flexible button to program.
3. Dial [645] on the dial pad. A confirmation tone will sound. If an error was made during entry, an error tone will sound.

When intercom call rings a busy station (w/intercom btn):

1. The calling station receives ringback tone instead of busy tone. The called station hears muted or reminder ring and their intercom button LED starts flashing at the incoming CO line rate. This indicates an incoming intercom call.
2. The called station can place the current CO call on hold by pressing the HOLD button,
-or-
Place the current intercom call on hold by pressing the HOLD button. The intercom call is placed on hold on the available intercom button.
3. The called station then presses the flashing intercom button to answer incoming intercom call. When answered, the following message displays on the called station LCD:

CALL FROM STA XXX MMM DD YY HH:MM am
--

Sta XXX can be a programmed station name.



SINGLE LINE TELEPHONE

Not applicable

Answering an Intercom Call

Depending on the selected intercom operating mode, answer the intercom call as indicated:

Handsfree Mode (No LED) -- You will hear three bursts of tone and an announcement.

Reply handsfree or lift the handset for privacy.

Tone Mode (LED On) -- You will hear repeated bursts of intercom tone ringing and HOLD button slow flashes.

Lift the handset or press the ON/OFF button (SPEAKER button on IP Phone) to answer.

-or-

 
Press the H-T-P button to the H mode to answer.

Privacy Mode (LED Flashing) -- You will hear three bursts of tone and a one-way announcement. The calling party cannot hear conversations in progress.

Lift the handset or press the ON/OFF button (SPEAKER button on IP Phone) to answer.

-or-

Press the H-T-P button to the H mode to answer.



Use feature code 667 to select an H, T, or P mode for 8-button digital telephones. Each use of this feature code acts as a rotary through the three options.

Intercom Transfer

To use Intercom Transfer without DSS Buttons:

1. Receive or make an intercom call.
2. Press the TRANS button. An intercom dial tone will sound.
3. Dial the desired station number.
4. When the second station answers, you are in a supervised transfer mode (first station is staged for transfer).
5. Hang up (stations 1 and 2 will be connected).

 
To use Intercom Transfer with DSS Buttons:

1. Receive or make an intercom call using a DSS button.
2. Press the TRANS button. An intercom dial tone will sound.
3. Press the DSS button where to transfer the call.
4. Hang up (stations 1 and 2 will be connected).

Intercom Calls

To place an Intercom Call:

1. Press the DSS button of the party to be called (if programmed at your phone),
-or-
Dial the extension number.



Dialing a number in the numbering plan activates the telephone automatically.

(You will hear ringing if the called station is in the T mode; or three bursts of tone if called station is in H or P modes.)

2. Lift the handset or use the speakerphone after the tone bursts stop.
3. Hang up to end the call.

To answer an Intercom Call:

In the T mode (LED On), you will hear repeated bursts of intercom tone ringing and the HOLD button slow flashes.

Lift the handset or press the ON/OFF button (SPEAKER button on IP Phone) to answer,

-or-

Press the H-T-P button to the H mode to reply.

In the P mode (LED flashes), you will hear three bursts of tone and one-way announcement. The calling party cannot hear conversations in progress.

Lift the handset or press the ON/OFF button (SPEAKER button on IP Phone) to answer,

-or-

Press the H-T-P button to the H mode to reply.

In the H mode (No LED), you will hear three bursts of tone and an announcement.

Reply handsfree or lift the handset for privacy.

**SINGLE LINE TELEPHONE***To place an intercom call:*

1. Lift the handset.
2. Dial the intercom number. You will hear ringing if the called station is in the "T" answering mode or two bursts of tone if the called station is in the "H" or "P" modes.
3. Hang up to end the call.

To answer an intercom call:

Lift the handset,

-or-

If your SLT is equipped with a speakerphone, press the Speaker button to converse in a handsfree mode.

IP Phone

The IP Phone provides the same functionality as other Vodavi digital telephones, with the following differences.

- Features not supported: OHVO, Background Music, feature code 695 for changing ring codes.
- Can make pages, but cannot receive pages.
- The PGM button is the H-P-T rotary.
- ICM and SAVE buttons are non-functional at this time.

Keyset Mode

This feature allows you to determine the mode and baud rate of the optional CTI Module connected to your phone.

This setting is stored in back-up memory in the case of a power outage or system reset.

When telephone is set to AT command mode, the following AT commands are supported:

Command Mode	Description
Inactive	No CTI information is sent/received by the telephone.
ATD	Modem Dialing Command -- The telephone will recognize the ATD and accept digits after the command.
ATH or ATHX (X= 0 or 1)	Modem On-Hook / Off-Hook Command -- ATH or ATH0 will force the telephone to go to the on-hook state from its current state. ATH1 will force the telephone to go to the off-hook state from it's current state.
CKTU	Command used with Wanderer (a cordless key telephone unit). The baud rate is not used in this mode; no change is necessary.
PC Phone	CTI information used with <i>Discovery Desktop</i> and <i>Discovery PCPhone</i> software must be set to 4800 baud rate.
SPI	Service Provider Interface -- Command used with 1st Party Call Control TAPI applications such as <i>Discovery Link</i>
TAPI	For 3rd Party Call Control TAPI applications such as <i>Discovery Net Phone</i> .
CKTU & TAPI	For simultaneous use of CKTU and 3rd Party Call Control TAPI

At an idle station:

1. Dial the Keypad Mode code [648] on the dial pad,
-or-
Press the *preprogrammed* KEYPAD MODE button, the following displays:

INACTIVE	2400
MODE=* SAVE=HOLD BAUD=#	

2. Press [*] to scroll through the keypad modes.
3. Press [#] to scroll through the baud rates.
4. Press the HOLD button to save the desired entries.



SINGLE LINE TELEPHONE

Not applicable

Last Number Redial



The Last Number Redial (LNR) feature permits the automatic redialing of the last telephone number dialed on an outside line. Up to 24-digits can be stored. Outside line selection of the same line used is automatic.

To use Last Number Redial, either:

Press the *preprogrammed* LAST NUMBER REDIAL button (code 650 - this code available only on XTS systems).

-or-

Press the SPEED button, then press [#].

-or-

Use the Soft Key's LNR option when in an idle condition.

-or-

Press the REDIAL button on an IP Phone

The system automatically selects the original line used to place the call and redials the last number dialed.

- ❑ If that line is busy, the system will select another line from the same group and redial the number.
- ❑ If no lines are available in the same group, you will receive a busy tone and can queue for a line.
- ❑ If you preselect a line before activating LNR, the preselection will override the line used originally.



SINGLE LINE TELEPHONE

Not applicable

LCR Operation

 
To place an outside call when LCR is enabled in the system:

1. Dial [9] on the dial pad,
-or-
Press the *preprogrammed* LCR button.
2. Dial the desired telephone number.
3. Wait for an answer. Lift the handset or use the speakerphone to converse.

If all available lines are busy, remain off-hook for four seconds to automatically be queued onto LCR for an available line, then hang up.

To answer an LCR Queue Call Back:

1. When your telephone is signaled, answer the call.
2. The desired telephone number will automatically be redialed.



Only one LCR Queue Call Back request may be initiated by a station. When a second request is made, the first request is cancelled.

If the 911 feature is enabled, the LCR access code is 800 instead of 9.

CO Line Queue Cancel

To cancel a Call Back Request:

1. Dial the CO Line Queue Cancel code [626] on the dial pad.
2. Replace the handset, or press the ON/OFF button (SPEAKER button on IP Phone).

Loop Key



A station not having a direct appearance for a CO line will receive incoming CO calls and transferred CO calls under the LOOP button. Only one call at a time can be connected to a keyset on the LOOP button.

To make a Loop button:

1. Press the SPEED button twice.
2. Press the desired flexible button.
3. Dial [89], then press HOLD.

-or-

Dial [8889], then press HOLD, if using the Alt Dialing Plan.

Mailbox Buttons



To program a station's mailbox on a flexible button:

 
1. Press the SPEED button twice.
2. Press the desired flexible button to be programmed.
3. Dial the mailbox feature access code (460-467 = voice mail location 1-8; 468 = remote voice mail location).
4. Dial the VMID number. A confirmation tone will sound. If an error is made during entry, an error tone will sound.

Example ... The numbers 4606037 represents a voice mail button (group 1) for VMID 6037 that is in the system with the centralized voice mail installed.

To use a mailbox button:

The called station presses the MAILBOX flexible button and goes on-hook. The internal or external call is then transferred to the VM port by the telephone system.

Message Wait



Stations that are busy, unattended and ringing, or in DND can be left a message indication by other stations in the system. Up to five messages can be left at one keyset. Upon return to the station, the user can answer the message waiting indication of each party in sequential order.

 
To leave a message waiting indication:

1. Lift the handset or press the ON/OFF button (SPEAKER button on IP Phone).
2. Dial the desired intercom station.
3. Press the MSG button or use the Soft Key's MSG option. A confirmation tone will sound. The called party's MSG button will flash slowly.
4. Replace the handset, or press ON/OFF (SPEAKER button on IP Phone) to end the call.

To answer a message waiting indication:

If your MSG button is lit and/or you have an LCD display of "MSG: XXXX", you have a message waiting for you. The first message left is the first one called.

1. Press the MSG button or dial [663]. The station that left message will be signaled with tone ringing.
2. If the called station does not answer, press the MSG button once if you want to leave that station a message waiting indication.



The MSG button on the IP Phone is labeled MSG/
CALLBK.



SINGLE LINE TELEPHONE

To leave a message waiting indication:

1. Lift the handset.
2. Dial the desired intercom station.
3. If you do not receive an answer, or a DND tone sounds, press the FLASH button.
4. Dial [623].
5. Hang up.

To answer a message waiting indication:

You have a message waiting for you, when your message waiting lamp is flashing or there is an interrupted dial tone when you lift the handset.

1. Lift the handset.
2. Dial [663]. The station that left message will ring.

Conditions

- » 8-button digital display telephones must use the Soft Key's MSG option to leave a message waiting indication and must use [663] to answer a message waiting indication.
- » 8-button digital non-display telephones cannot leave a message waiting indication, but they can use [663] to answer a message waiting indication.

Modem

Voice Mail Modem Access

You can program Vodavi voice mail systems (other than MiniVoice or PathFinder) using the telephone system modem.

To access the voice mail system, you can either:

Dial [498], ring directly to 498, be transferred to 498.

Telephone System Modem Access

Feature code 499 is used for access to the telephone system modem. This modem allows remote telephone system programming via an SLT or externally by having a call transferred to extension 499. COs and DIDs (if applicable) can also be programmed to ring directly to extension 499.

Mute

Pressing the MUTE button while in the speakerphone mode or using the handset disables the microphone but does not affect the speech coming over the speaker or handset. Pressing the illuminated MUTE button again reactivates the microphone.

To disable the microphone:

1. Press MUTE while off-hook on speaker or handset to activate.
2. Press MUTE again to deactivate. Mute automatically deactivates upon call termination.

Name In Display

Every extension (Key or SLT) has the capability to program your name so that people using display telephones will see your name instead of your station number.

To create your name:

1. Dial [690] on the dial pad.
2. Use dial pad keys to enter your name (up to 7 characters).

1	A - 21 B - 22 C - 23	D - 31 E - 32 F - 33	Other Codes			
G - 41 H - 42 I - 43	J - 51 K - 52 L - 53	M - 61 N - 62 O - 63	1 = 1#	8 = 8#	" = 01	* = *#
P - 71 R - 72 S - 73 Q - 74	T - 81 U - 82 V - 83	W - 91 X - 92 Y - 93 Z - 94	2 = 2#	9 = 9#	, = 02	(= #1
*	OPER 0	#	3 = 3#	0 = 0#	? = 03) = #2
			4 = 4#	Space = 11	/ = 04	+ = #3
			5 = 5#	: = 12	! = *1	= = #4
			6 = 6#	- = 13	\$ = *2	# = ##
			7 = 7#	' = 14	& = *4	. = 24

3. Press the SPEED button to complete programming process.

To erase your name:

1. Dial [690] on the dial pad.
2. Press the SPEED button to complete the erasing process.



SINGLE LINE TELEPHONE

To create your name:

1. Dial [690] on the dial pad.
2. Enter the name (up to 7 characters may be entered) by using keys on the dial pad.
3. Press the FLASH button to complete the programming process.

To erase your name:

1. Dial [690] on the dial pad.
 2. Press the FLASH button to erase.
-

Night Service



To enter Night Service Mode, from an idle station:

Press the *preprogrammed* NIGHT SERVICE flexible button [604]. The system is now in the Night Service Mode.

To remove Night Service Mode:

Press the *preprogrammed* NIGHT SERVICE flexible button [604] again. The system is now removed from the Night Service Mode.

Off-Hook Voice Over (OHVO)



 
OR



While off-hook on a call (CO or Intercom), this feature allows you to receive a voice announcement through the handset receiver without interrupting the existing call.

You may then respond to the calling party using CAMP ON procedures to talk to the calling party, or use Silent Text Messaging to respond to the calling party via LCD Displays.

The calling station is placed in a one-time DND mode upon initiating the voice-over. One-Time DND cannot be toggled during the OHVO call. The station receiving the OHVO call must be off-hook and in the "H" mode.



The IP Phone does not support this feature.

To place an Off-hook Voice Over call:

When an OHVO station calls a busy OHVO station and a busy tone is received, the calling OHVO station must:

Press a *preprogrammed* OHVO button [628],

-or-

 
Use the Soft Key's OHVO option to initiate an OHVO announcement. The following conditions will occur:

- The HOLD button LED flashes at the called OHVO station.
- The OHVO receiving station receives a one-beep warning tone.

The station receiving the OHVO call must be off-hook and in H or P mode, in order to hear the calling OHVO party's voice announcement.

The called OHVO station's existing conversation is uninterrupted and the voice over announcement does not drown out the existing conversation. If receiving station is call forwarded, use 5# to override forwarding.

- The calling OHVO station is not connected or able to hear the called station's conversation (connection only allows calling station to transmit to the called station).



The calling station is placed in a one-time DND mode upon initiating the Voice Over. One-Time DND cannot be toggled during the OHVO call. The station receiving the OHVO call must be off-hook and in H mode.

To respond to an Off-hook Voice Over:

After receiving an OHVO announcement, select from the following three options to respond to the caller:

Option 1 -- This method lets the receiving station respond to an OHVO announcement utilizing the MUTE feature button. This button is pressed to carry on a two-way conversation with the OHVO initiator while still listening to the original call.

Option 2 -- The OHVO receiving station may respond to the calling station by using the Silent Text Messaging (this feature is only available to digital key telephones, and the calling station must be a digital display telephone). The OHVO receiving station may press a *preprogrammed* Message button to respond to the voice over announcement without being released from the current call (e.g., by pressing a flexible button *preprogrammed* for the message IN MEETING, the calling station receives this message on the LCD display).

Option 3 -- The OHVO receiving station may respond to the calling OHVO station by using the Camp On feature. The OHVO receiving station presses the flashing HOLD button to consult with the calling station. The existing call (CO line) goes on Exclusive Hold automatically. This method then follows Camp On procedures and operation.



IP Phones do not support the OHVO function.



SINGLE LINE TELEPHONE

Not applicable

Outside Calls



Placing an Outside Line on Hold

- If Exclusive Hold Preference is programmed, press HOLD once for Exclusive Hold or twice for System Hold.
- or-
- If System Hold Preference is programmed, press HOLD once for System Hold or twice for Exclusive Hold.

Answering a Recall

When an outside line has remained on hold for an extended period of time, you are reminded with a recalling ring. (If Preferred Line Answer is enabled, skip Step 1.)

1. Press the OUTSIDE LINE, LOOP, or POOL button (flashes at a very fast rate).
2. Lift the handset or press ON/OFF (SPEAKER button on IP Phone) to converse with party.

Answering an Outside Call

1. Lift the handset or press the ON/OFF button (SPEAKER button on IP Phone).
2. Press slow flashing OUTSIDE LINE button or LOOP button. (If Preferred Line Answer is programmed, you may answer an outside line by lifting the handset or pressing ON/OFF or SPEAKER button on IP Phone.)

Placing an Outside Call

To access an outside line for dialing out:

1. Press idle CO line button, POOL button,
-or-
Dial access code: 9, 801-823, 88+LLL. (LLL = CO Line Number)
2. Dial number for outside call.
3. Lift handset or use the speakerphone to talk to called party.

Paging



If given the ability to make page announcements:


1. Lift the handset, or press ON/OFF (SPEAKER button on IP Phone).
2. Dial a three-digit paging code,
-or-
Press the *preprogrammed* PAGING flexible button.
-or-
Use the Soft Key's ALLPG IN or ALLPG EX options when in an idle condition (versus paging codes 721 or 760 on *XTS* or 709 or 761 on *XTSc*).

XTS Code	Zone	XTSc Code	Zone
700	Int/Ext All Call	700	Int/Ext All Call
701-720	Int Zone 1-20	701-708	Int Zone 1-8
721	Int All Call	709	Int All Call
760	Ext All Call		
761	Ext Page Zone 1	761	Ext Page Zone
762	Ext Page Zone 2		
763	Ext Page Zone 3 (for <i>XTS</i> systems with MPB2 or MPBE)		

3. Speak in a normal tone of voice to deliver message.
Stations receiving a page Announcement can press the Volume Bar to change Paging Volume. The display shows:

SPEAKER PAGE [#####] MMM DD YY HH:MM am
--

 4. Replace the handset to terminate the page announcement.



*Stations off-hook or in DND will not hear the page announcement.
An IP Phone can be used to make Page announcements, but it cannot receive Page announcements.*

Paging - Meet Me

To request another party meet you on a page:

1. Dial the desired three-digit paging code.
2. Request the party to meet you on the page.
3. Do not hang up; wait for the requested party to answer.

To answer a Meet Me Page:

1. Go to the nearest phone.
2. Dial [770] or press the *preprogrammed* MEET ME flexible button.
You will be connected to party that paged you.

Personalized Messages

Pre-assigned Messages

Each station can select a pre-assigned message to display on the LCD of any key telephone calling that station. There are ten messages available.



This feature is unavailable at Attendant stations. Stations cannot be call forwarded or in DND and have this feature active.

To select a pre-assigned message:

1. Dial [633] on the dial pad,
-or-
Press the a *preprogrammed* PERSONAL MESSAGES button.
2. Dial the 2-digit code for the message that displays. A confirmation tone will sound; DND button LED will flash.

00 = (clears msgs)	04 = Return Tomorrow	08 = At Home
01 = On Vacation	05 = Return Next Week	09 = On Break
02 = Return AM	06 = On Trip	10 = At Lunch
03 = Return PM	07 = In Meeting	

 
To cancel a pre-assigned message:

1. Either dial the Personal Messages code [633] + [00], dial [662], or press the DND button.
2. Replace the handset. The DND button LED will extinguish.

Custom Messages

Each station can select from ten possible custom messages to display on the LCD of a key telephone calling that station. These messages are programmed from the first Attendant station for system-wide use.

Each station can also program three unique custom messages.



The Custom Messages feature is not available for use by Attendant stations.

To select a custom message:

1. Dial [633] on the dial pad,
-or-
Press a *preprogrammed* PERSONAL MESSAGES button.
2. Dial a valid message number (21-30) for the desired custom message.
The first Attendant should provide a list of messages to each station user.

To program a unique custom message:

1. Dial [633] on the dial pad.
2. Dial a valid message number (18-20) for the desired custom message.
3. Enter a custom message, up to eight characters.
4. Press the HOLD button to save the message.

To use a unique custom message:

1. Dial [633] on the dial pad.
-or-
Press a *preprogrammed* PERSONAL MESSAGES button.
2. Dial a valid message number (18-20) for the desired custom message.

To cancel a custom message:

1. Either dial the Personal Messages code [633] + [00], dial [662], or press the DND button.
2. Replace the handset. The DND button LED extinguishes.



SINGLE LINE TELEPHONE

SLT users can use custom messages (21-30) as described above. Unique custom messages (18-20) are not applicable. SLT users cancel the use of a custom message by using feature code 662.

Date and Time Entry Messages

Station users can activate certain messages that let users enter a specific time or return date. These messages appear on the calling station's display to alert them of the desired party's return time or date.

To activate a message with a custom return time or date:

1. Dial the Message Access code [633] on the dial pad.
2. Then dial the desired message number [11- 17].

Users may activate the following messages and be prompted to enter a return time or date:

[11] = Vacation Until: *MM/DD*

[15] = At Home Until: *HH:MM xm*

[12] = Return: *HH:MM xm* or *MM/DD*

[16] = On Break Until: *HH:MM xm*

[13] = On Trip Until: *MM/DD*

[17] = At Lunch Until: *HH:MM xm*

[14] = Meeting Until: *HH:MM xm*

3. Enter the date/time on the dial pad as shown:

			Other Codes			
1	A - 21 B - 22 C - 23	D - 31 E - 32 F - 33	1 = 1#	8 = 8#	" = 01	* = *#
G - 41 H - 42 I - 43	J - 51 K - 52 L - 53	M - 61 N - 62 O - 63	2 = 2#	9 = 9#	, = 02	(= #1
P - 71 R - 72 S - 73 Q - 74	T - 81 U - 82 V - 83	W - 91 X - 92 Y - 93 Z - 94	3 = 3#	0 = 0#	? = 03) = #2
*	OPER 0	#	4 = 4#	Space = 11	/ = 04	+ = #3
			5 = 5#	: = 12	! = *1	= = #4
			6 = 6#	- = 13	\$ = *2	# = ##
			7 = 7#	' = 14	& = *4	. = 24

4. Press the HOLD button to enter message. A confirmation tone will sound and the DND button LED will flash.

To cancel the message:

1. Either dial the Personal Messages code [633] + [00], dial [662], or press the DND button.
2. Replace the handset. The DND button LED will extinguish.



SINGLE LINE TELEPHONE

Not applicable

Scrollable Canned Messages



The Scrollable Canned Message feature allows you to use a single digit [#] or [*] to scroll through the canned messages and select one. When the desired message is displayed, pressing the hold button places that message on the station LCD. This feature operates when the phone is in the idle mode only. This feature cannot be activated if the station is in the Call Forward or DND mode(s). This feature is not available to Attendant stations.

To select a Scrollable Canned Message:

- 1. Dial [633]+[#] on the dial pad,

-or-

Use the Soft Key's PERS-MSG option.

-or-

Press the PERSONAL MESSAGES button. Clear Messages is always first. The following message displays:

CLEAR MESSAGES
NEXT=# PREV=* SAVE=HOLD

- 2. Press [#] to scroll through the messages or press [*] to scroll backward through the list.
- 3. Scroll forward through the messages in the following order. The scroll is a rolodex-type scroll.

- | | |
|----------------------|-----------------------|
| 1 - (Clear Messages) | 7 - On Vacation |
| 2 - At Home | 8 - Return AM |
| 3 - At Lunch | 9 - Return PM |
| 4 - In Meeting | 10 - Return Next Week |
| 5 - On Break | 11 - Return Tomorrow |
| 6 - On Trip | |

- 4. When the desired message displays on the LCD, press the HOLD button to activate that message on your station. A confirmation tone will sound; DND button LED will flash.

To cancel the message:

1. Either dial the Personal Messages code [633] + [00], dial [662], or press the DND button.
2. Replace the handset. The DND button LED will extinguish.



SINGLE LINE TELEPHONE

Not applicable

Personal Messages Flexible Button

You can program the code [633] onto a flexible button to speed access to select and use messages.

To program the Personal Messages Flexible Button:

1. Press the SPEED button twice.
2. Press the desired flexible button. The LED will flash.
3. Dial [633]+[#] on the dial pad. A confirmation tone will sound.

To use the flexible button, press that flexible button, then either:

Dial the 2-digit message number (00-10 or 18-30) to activate the message. Confirmation tone sounds and DND button LED flashes.

-or-

Press [#] to scroll forward or [*] to scroll backward through the list. When desired message is shown on the LCD, press HOLD to activate that message on your station. Confirmation tone sounds and DND button LED flashes



SINGLE LINE TELEPHONE

Not applicable

PBX/Centrex Codes on a Flex Button



For one-button access to Centrex or PBX features:

1. Program Centrex or PBX code into a Station or System Speed Dial bin, including hook-flash (FLASH key), [*], and [#] commands (refer to *"Speed Dial" on page 97*).
 2. Program that speed bin onto a flexible button (refer to *"Flexible Button Programming" on page 62*).
-

Release Button



The Release Button feature allows the station user to speed up call handling time by disconnecting calls while being off-hook.

Using the handset, while off-hook (not the speakerphone):

Press the *preprogrammed* RELEASE button [641] to terminate intercom call, transfer sequence, page announcement or CO call.

Redial

Last Number Redial



To use Last Number Redial, either:

1. Press the SPEED button.
2. Press the pound [#] key. The last number dialed over an outside line will be automatically redialed.

-or-

Use the Soft Key's LNR option when in an idle condition.

-or-

Press the REDIAL button on an IP Phone.

Save Number For Redial



To save the last number you dialed:

1. After placing an outside call, keep the handset off-hook.
2. Press the SPEED button twice,
-or-
Use the Soft Key's STORE NO option.

Redial a Saved Number



To dial a number that was saved for redial, either:

Press the SPEED button, then press the [*] key.

-or-

Use the Soft Key's SNR option when in an idle condition. The saved number is automatically dialed.

Repeat Redial



When placing a CO call and a Busy or No Answer is received:

1. Press the *preprogrammed* RPT REDIAL flexible button [643]. You will receive an LCD prompt for a timer value.

ENTER RPT REDIAL TIMER: XXX 006-999
--

2. Enter a valid number (006-999 seconds) for the Repeat Redial Timer. The default value is 060 (one minute). A confirmation tone will sound when you go on-hook. The flexible button LED will be lit steady.

When the timer expires, you will receive a signal via a CO line queue indication on the RPT REDIAL flexible button. During the Queue Call Back, the LCD display will indicate that this is a Redial Call Back. Once the line queue is answered, the LCD will indicate an outgoing CO line.

To activate a redial:

Press the *preprogrammed* REDIAL flexible button,

-or-

Press the ON/OFF button (SPEAKER button on IP Phone),

-or-

Lift the handset, the line will be seized and number is dialed. If you receive a busy/no answer, you may repeat the step to activate another redial.

To cancel the operation:

Press the *preprogrammed* REDIAL flexible button. A confirmation tone will sound and the Auto Redial function is cancelled.



SINGLE LINE TELEPHONE

Not applicable

Ring Down/Hot Line/Off-Hook Preference



If your phone has been programmed for Off-Hook Preference, you can access an outside line or a system feature by going off-hook or pressing the ON/OFF button (SPEAKER button on IP Phone). It simulates the depression of a specific button and can be programmed by a station user or a database administration programmer using code [691] + the button number.

While Off-Hook Preference is enabled, you may access internal intercom dial tone as follows:

1. Press the *preprogrammed* ICM button,
-or-
Dial your intercom number. (Do not lift the handset or press the ON/OFF button, or SPEAKER button on IP Phone, before dialing intercom number.) The LED will light steady and an intercom dial tone will sound.
2. Dial an internal station or feature access code.

Off-Hook Preference Programming (Via a Station)

If your phone is programmed for Off-Hook Preference and you were given the ability to enable or change the prime flexible button:

1. Dial [691] on the dial pad.
2. Dial desired flexible button number (01-30).

To disable Off-Hook Preference:

1. Dial [691] on the dial pad.
2. Dial [00] on the dial pad.



SINGLE LINE TELEPHONES

Single line telephone users can bypass Off-Hook Preference by pressing the FLASH button and then dialing their extension number.

Ring Tone

To select a distinctive ring tone for a station:


1. Dial the Ring Tone program code [695] on the dial pad. The following message displays:

ENTER RING TONES	00-36
XX PRESS SPEED TO SAVE	

2. Enter a valid tone number. The speaker will sound a steady tone that correlates to the 2-digit entry. The 2-digit tone number will display in the lower left corner of the LCD.
The ringing choices are as follows:

CO RING TONE*/FREQUENCY					
Tone (#)	Freq	Tone (#)	Freq	Tone (#)	Freq
00	697/770	13	770/1633	26	1209/1336
01	697/852	14	770/0	27	1209/1477
02	697/941	15	852/941	28	1209/1633
03	697/1209	16	852/1209	29	1209/0
04	697/1336	17	852/1336	30	1336/1477
05	697/1477	18	852/1477	31	1336/1633
06	697/1633	19	852/1633	32	1336/0
07	697/0	20	852/0	33	1477/1633
08	770/852	21	941/1209	34	1477/0
09	770/941	22	941/1336	35	1633/0
10	770/1209	23	941/1477	36	OFF
11	770/1336	24	941/1633	Tone Duration* = 50 ms/50 ms	
12	770/1477	25	941/0		

 - When desired tone is selected (default ringing code is set to 00), press the SPEED button to save it as the tone to present to callers. A confirmation tone will sound.



IP Phones do not support the Ring Tone feature.

School Zone

Description

The School Zone feature allows a person at a station(s) specified as an Administrator to control incoming calls for all stations specified as a Classroom. The Administrator controls the type of call forwarding and the call forwarding destination. Call forwarding types include All Call Forward, No Answer Call Forward, Busy Call Forward, and Busy / No Answer Call Forward. Valid call forwarding destinations include station numbers, hunt groups, UCD groups, and Voice Mail groups.

Stations to be included as part of the School Zone feature must be assigned in Admin programming as either an Administrator station or as a Classroom station. After these assignments have been established, the Administrator can easily control call forwarding for the specified Classroom stations by using feature code 630.

Operation

To control School Zone call forwarding (at an Administrator station):

- Dial [630] + a call forward condition code (0 or 6-9) + a valid destination number

Call Forward Condition Codes:

0 = Disabled

6 = All Call Forward

7 = No Answer Call Forward

8 = Busy Call Forward

9 = Busy / No Answer Call Fwd

Valid Destinations:

Station Numbers

Hunt Groups

UCD Groups

Voice Mail Groups

- Press [HOLD]. A confirmation tone sounds.

To view call forwarding status of Classroom telephones:

1. The Administrator uses a station assigned as an Administrator station and dials feature code [630] + [#]. A confirmation tone sounds and the LCD updates to show one of the following displays:

CLASSROOM STATUS BSY FWD TO XXXX

CLASSROOM STATUS NA FWD TO XXXX

CLASSROOM STATUS B/NA FWD TO XXXX

CLASSROOM STATUS FWD TO XXXX

2. Press [ON/OFF] (SPEAKER button on IP Phone) to return to an idle status.

Conditions

- » A station can be assigned as an Administrator or as a Classroom, but not as both.
- » A call from an Administrator station to a Classroom station overrides any School Zone call forward settings and the call rings at the Classroom station.
- » School Zone call forwarding overrides station user call forwarding and DND.
- » If an E-911 button is programmed, both audible and visual alert indications will be provided, regardless of School Zone call forward settings.
- » The School Zone call forwarding feature does not apply to a Classroom station a hunt group or an ACD/UCD group.

Speakerphone

1. Press the ON/OFF button (SPEAKER button on IP Phone) to ON. (An intercom dial tone will sound.)
 2. Press the DSS key of the desired party or press an available OUTSIDE LINE button and dial the number.
The speakerphone will be activated.
 3. Press the ON/OFF button (SPEAKER button on IP Phone) to end the call.
-

Speed Dial

A keyset user can associate up to 20 frequently dialed numbers as Station Speed Numbers (9000 to 9019). Telephone numbers can be up to 24 digits including pauses, flash commands, pulse-to-tone switchover, and non-display characters. A pause is automatically inserted after a flash.

To use speed dial:

1. If an outside line was not specified in programming, one can be selected now or the system will assign the line.
2. Press the SPEED button and dial speed bin location,
-or-
Press the *preprogrammed* speed bin button,
-or-
Use the Soft Key's SPD option and then dial a speed bin location when in an idle condition.

To store speed dial numbers:

1. Press the SPEED button once.
2. Press an OUTSIDE LINE button or the POOL button.
-or-
Select an outside line by pressing the SPEED button again.
3. Dial the speed bin location.
4. Dial the desired telephone number and include these special codes:
TRANS -- Initiates a Pulse-To-Tone switchover.
HOLD -- Inserts a Pause.
FLASH -- Inserts a Flash into the speed number.
TRANS -- When used as the first entry in the speed bin, this inserts a non-display character causing numbers stored in the bin not to appear on the digital telephone's display when bin is accessed.
5. Press the SPEED button.
6. Replace the handset to end the speed bin programming.

To program multiple speed numbers:

1. Press the SPEED button twice to conclude programming a number.
2. Enter the next speed number bin to program.
If the station has no line appearance for the line programmed into the speed bin, that line comes up under the LOOP button or POOL button when accessed.

To erase an existing speed bin:

1. Press the SPEED button twice.
2. Dial the speed bin location.
3. Press the SPEED button again. A confirmation tone will sound.



 
SINGLE LINE TELEPHONE

To use speed dial:

1. Lift the handset.
2. Dial [668] on the dial pad.
3. Dial the desired station or system speed bin number.
4. Replace the handset to end the call.

To store speed dial numbers:

1. Lift the handset.
2. Dial [661] on the dial pad.
3. Dial the desired station speed number (9000-9019).
4. Dial the telephone number to store.
5. Press the FLASH button. A confirmation tone will sound.



Line Group 1 is programmed along with SLT speed numbers, and thus Line Group 1 is used when activating station speed dial from an SLT.

System Speed Dial Access

The first programmed Attendant must enter the System Speed numbers (9020 to 9999 or 9020-9099 for *XTS*c). If an Attendant was not specified, system speed numbers are entered at Station 100.

Stations can be individually allowed or denied the ability to use system speed dial (9100-9999) numbers (*System speed numbers 9060-9099 are not monitored by toll restriction*). Stations cannot be prevented from using station speed dial.

Station/Port Fixed Number

When a station dials the feature code 611 on a display telephone, the Fixed Station/Port Number for that telephone will display. *Example ...* when using flexible numbering, some programming steps require the "FIXED" code. This code allows you to dial 611 and quickly determine the fixed port.

STATION PORT:
XXX



 
SINGLE LINE TELEPHONE

Not applicable

Station Relocate

The Station Relocation Feature allows you to dial a code followed by the old station number to bring all the station attributes including extension number, button mapping, speed dial, and class of service to the new location.

1. A station can be relocated by unplugging it, then plugging it into a new location.
2. Dial [636] on the dial pad. Then, dial the extension number of the station being relocated. Once this is done, all station attributes are copied to the current station.



If a station is assigned to a specific port and that station user unplugs their station and plugs it in at another location, the database administration programming is updated to reflect the new port. Station lock will prevent this feature from working correctly.



SINGLE LINE TELEPHONE

Not applicable

Text Messaging (Silent Response)

The Text Messaging feature allows you to use text messages to respond to a caller that has either Camped On or has used the off-hook voice over (OHVO) feature to alert a busy station of a waiting call or message. The Camped On station may respond to the caller via the canned, custom, and silent response text (LCD) messages. Text messages appear on the calling party LCD display. The calling (originating) station and receiving station **MUST** be digital telephones. The receiving station **MUST** also be programmed to allow OHVO calls.

While receiving a Camp On or OHVO call:

The called party may press a *preprogrammed* Text Message button with a specific message [633+XX].

Example ... [633] + [38] means a telephone calling the station receives the message WHO IS IT ?

Code	Text Message	Code	Text Message
31	I Will Take Call	42	Is It Important?
32	Take Message	43	Is It Urgent?
33	Transfer To Secretary	44	Send Call To Voice Mail
34	Put Call On Hold	45	Park Call
35	Call Back	46	Out Of Office
36	One Moment Please	47	Put Call Through
37	I Will Call Back	48	I Am Busy
38	Who Is It?	49	O.K.
39	Is It Long Distance?	50	No
40	Is It Personal?	51	Yes
41	Is It An Emergency?		



SINGLE LINE TELEPHONE

Not applicable

 
Universal Day/Night Answer



Incoming CO lines can be programmed for Universal Day Answer (UDA) or Universal Night Answer (UNA). UDA/UNA assigned CO lines can also signal over the external page port(s). If External Day programming is enabled and the system is in the day mode, the assigned external page port(s) present a ringing signal. UDA/UNA is established on a per CO line basis in admin programming.

When the system is in Day or Night mode and an outside line rings at another station, and you wish to answer it:

Dial [#5] or use the Soft Key's UDA/UNA option. The connected outside line can be transferred or disconnected.



Each telephone utilizing Universal Day/Night Answer must have a loop button appearance if the ringing outside line does not display at their phone.

Voice Mail

Call Forwarding to Voice Mail Groups

Callers may be routed directly to your mailbox by forwarding your phone to a voice mail group.

1. Lift the handset or press the ON/OFF button (SPEAKER button on IP Phone).
2. Press FWD or dial [640].
3. Dial the desired code:

[6] = All Calls	[8] = Busy
[7] = No Answer	[9] = Busy/No Answer

-
4. Dial the 3-digit Voice Mail group pilot number where calls are to be forwarded (440-447 = voice mail groups 1-8). A confirmation tone will sound.
 5. Replace the handset, or press the ON/OFF button (SPEAKER button on IP Phone).

Retrieving Voice Messages



To enter the Voice Mail system to check for messages:

Either dial Voice Mail group number, press *preprogrammed* VM GROUP flexible button, press flashing MESSAGE WAIT button, or use the Soft Key's VM1 option (group 440 only). You will be prompted to enter your mailbox password.

Voice Mail Transfer with ID Digits

While on a call and the caller on the other end wishes to leave a Voice Message for another VM user:

1. At the initiating station, press the TRANS button.
2. Dial the Voice Mail Group number or press the *preprogrammed* VM GROUP flexible button.
3. Dial VMID (mailbox location) of the desired party and go on-hook.

Voice Mailbox Button

To program a Mailbox flexible button:

1. Press the SPEED button twice.
2. Press the desired flexible button to be programmed.
3. Dial the Mailbox feature code (460-467 = voice mail groups 1-8; 468 = remote voice mail group).
4. Dial the VMID number.



SINGLE LINE TELEPHONE

Not applicable

Voice Mail Group Button

To program a VM GROUP flexible button:

1. Press the SPEED button twice.
2. Press the desired flexible button to be programmed.
3. Dial a 3-digit VM Group number (440-447=VM groups 1-8).
4. Dial the VMID number.

Voice Mail Group Access



To access a VM Group:

Dial VM Group number (440-447),

-or-

Press *preprogrammed* VM Group flexible button,

-or-

Use the Soft Key's VM1 option when in an idle condition (to access group 440 only).

Voice Mail One-Touch Recording



 
OR



The Voice Mail One-Touch Recording feature allows the station user, while on an external call, to press a *preprogrammed* flexible button or Soft Key and have the system record the conversation in the station user's mailbox.



Use of this feature when the One-Touch Recording Warning Tone is disabled may be interpreted as a violation of federal, state or local laws, and an invasion of privacy. Check applicable laws in your area before recording calls using this feature.



The "MiniVoice" system does not support Voice Mail One-Touch Recording.

To make a VM RECORD flexible button:

1. Press the SPEED button twice.
2. Press the desired flexible button to be programmed.
3. Dial feature code [649] + [VVV] (where VVV = 440-447 for desired VM group).

While on an internal or external call:

1. Press the *preprogrammed* VM RECORD button, or use the Soft Key's REC option (for VM Group 440 only). The LED will flutter red during setup and the following message display:

RECORDING SETUP MMM DD YY 00:00 am
--

2. Once the system makes the connection, your mailbox and the flexible button LED will light solid green. The LCD will display the following message:

RECORDING MMM DD YY 00:00 am
--

To pause or resume recording after a pause, press the *preprogrammed* 655 key.

3. When you finish recording, press the *preprogrammed* VM RECORD button or the Soft Key's STOP option. The LED will extinguish and the normal LCD call information will display.




SINGLE LINE TELEPHONE

Not applicable

Conditions

- » This feature only applies to digital voice mail.

Voice Mail (Flash-Based) Quick Reference

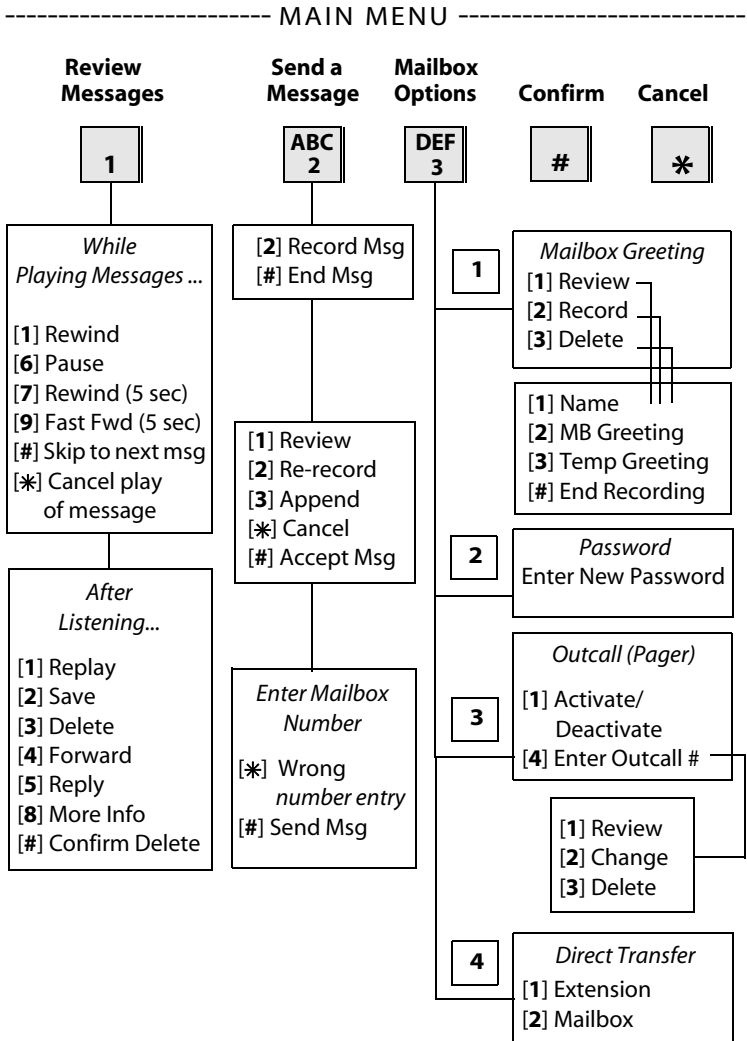

Voice Mail (Flash-Based) Quick Start

The following is a quick start procedure for first-time users:

1. Obtain System Administrator information:
 - » Voice mail system access number
 - » Your mailbox number
 - » Your temporary password
2. Dial voice mail system access number,
-or-
Call into the Auto Attendant, then
press **#** and enter your mailbox number.
3. After prompt, enter temporary password.
4. Press **3** to access Mailbox Options.
5. Press **2** to access Passwords.
6. After prompt, enter new password.
7. Press **1** to access Greeting Options.
8. Press **2** to select the Record option.
9. Press **1** to record your Name.
10. Press **2** to record your Greeting, then
press **#** to end recording.

Volume Control

DIGITAL TELEPHONES

The volume control on the Digital Key Telephone controls ringing, handset, and speakerphone volumes. It also affects the receive volume of the “Wanderer” cordless unit.

Display Messages -- While using these function/features, Digital Key Telephones with LCDs display the following messages:

Listening to Background
Music ...

SPEAKER BGM	[#####]
MMM DD YY	HH:MM am

Using the speakerphone on
an Intercom call ...

SPEAKER CALL	[#####]
MMM DD YY	HH:MM am

Using the handset on an
Intercom call ...

HANDSET ICM	[#####]
MMM DD YY	HH:MM am

Using the speakerphone on a
CO call ...

SPEAKER CALL	[#####]
MMM DD YY	HH:MM am

Using the handset on a CO
call ...

HANDSET CO	[#####]
MMM DD YY	HH:MM am

Receiving a page
announcement ...

SPEAKER PAGE	
MMM DD YY	HH:MM am

Receiving an incoming tone
ringing Intercom or CO call ...

SPEAKER RING	[#####]
MMM DD YY	HH:MM am



SINGLE LINE TELEPHONE

The volume control on the Single Line Telephone is located on the right side of the telephone. The slider switch options are HI for loud volume, LO for low volume, and OFF to turn the ringer off. Two-line models have a volume switch for each line. Certain models do not have an OFF option.

Speakerphone Models -- have a sliding volume switch to adjust speakerphone volume. Slide the switch toward you for lower volume or away from you for increased speakerphone volume.

Handset Volume -- each SLT has a volume button that can be pressed to increase or decrease the handset volume.

B/Z Ringer Switch -- is located on the bottom of the telephone near the line jacks. This switch should be set to the Z mode for business/hospitality applications and to the B mode for residential applications.



The MSG light and the Line In Use (LIU) LEDs will not operate when set in the B ringer mode.

To change volume system setting:

For SLTs not equipped with a volume control slider switch, or to increase the volume greater than that allowed by the slider switch, use the following steps:

1. Dial [638].
2. Dial a valid number (0-9) to select a volume level.
3. Press HOLD.

Worksheets

30 Flexible Button Programming Worksheet

	1

	2

	3

	4

	5

	6

	7

	8

	9

	10

	11

	12

	13

	14

	15

	16

	17

	18

	19

	20

	21

	22

	23

	24

	25

	26

	27

	28

	29

	30

Speed Dial Bin Programming Worksheet

BIN 9000		BIN 9010	
BIN 9001		BIN 9011	
BIN 9002		BIN 9012	
BIN 9003		BIN 9013	
BIN 9004		BIN 9014	
BIN 9005		BIN 9015	
BIN 9006		BIN 9016	
BIN 9007		BIN 9017	
BIN 9008		BIN 9018	
BIN 9009		BIN 9019	

24 Flexible Button Programming Worksheet

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="checkbox"/> 1	<input type="checkbox"/> 2	<input type="checkbox"/> 3	<input type="checkbox"/> 4
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="checkbox"/> 5	<input type="checkbox"/> 6	<input type="checkbox"/> 7	<input type="checkbox"/> 8
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="checkbox"/> 9	<input type="checkbox"/> 10	<input type="checkbox"/> 11	<input type="checkbox"/> 12
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="checkbox"/> 13	<input type="checkbox"/> 14	<input type="checkbox"/> 15	<input type="checkbox"/> 16
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="checkbox"/> 17	<input type="checkbox"/> 18	<input type="checkbox"/> 19	<input type="checkbox"/> 20
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="checkbox"/> 21	<input type="checkbox"/> 22	<input type="checkbox"/> 23	<input type="checkbox"/> 24

Default Numbering Plan

Function	Code	Digital	Attendant	SLT
911 Alert View/Delete (reqs btn)	608/608+FLASH	•	•	
Account Code (reqs btn)	627	•	•	•
ACD Call Factor* (reqs btn)	580+[UUU]+[FFF]	•	•	
ACD Call Qualifier button*	570+[#]	•	•	
ACD Call Qualifier button* - one touch	570+[YYY]	•	•	
ACD CIQ Display Btn* (specific ACD grp) (reqs btn)	579+[UUU]	•	•	
ACD Group* (group 1-32, <i>XTSc</i> = grps 1-16 only)	550-565 = grps 1-16 534-549 = grps 17-32	•	•	•
ACD Help* (digital reqs btn)	574	•	•	•
ACD Member Status*	573	•	•	
ACD Overflow Avail/Unavail*	578	•	•	
ACD Login (Primary)*	572+[UUU]+[UUUU]	•	•	•
ACD Login (Secondary)*	582+[UUU]+[UUUU]	•	•	•
ACD Logout (Primary)*	571	•	•	•
ACD Logout (Secondary)*	581	•	•	•
ACD Supervisor Display*	577+[UUU]	•	•	
ACD Supervisor Login*	576+[UUU]+[UUUU]	•	•	
ACD Supervisor Logout*	575+[UUU]	•	•	
ACD Supervisor Monitor	583	•	•	
ACD*/UCD Avail/Unavail	566	•	•	•

Function	Code	Digital	Attendant	SLT
ACD*/UCD CIQ Sta Display (any grp)	567+[UUU]	•	•	
ACD*/UCD Wrapup End (reqs btn)	584	•	•	
Answering Machine Ring	654+[0] or 8665 if Alt Dial Plan	•	•	
Answering Machine Speaker	654+[1] or 8666 if Alt Dial Plan	•	•	
Attnd	0	•		•
Attnd Clear Alarm (T-1)	606		•	
Attnd CO Line Ext (Off-Net) Fwd	603+[NNN]+[YYYY]		•	
Attnd Custom Message	694+[XX]+message		•	
Attnd Day/Night/Special (reqs btn)	631 (DND key)		•	
Attnd Directory List Programming	693		•	
Attnd Disable Outgoing CO Line	602+press CO line btn		•	
Attnd Override (reqs btn)	601		•	
Attnd Setting Time and Date	692+date & time		•	
Attnd Unavailable	607		•	
Attnd Voice Mail Alarm Clear	656		•	
Background Music (Ch 3=MPB2/MPBE); (n/a for IP Phones)	632+[0, 1, 2, or 3]	•	•	
Call Back	622	•	•	•
Call Coverage - Non-Ring (reqs btn)	647+[XXX]	•	•	
Call Coverage - Ringing (reqs btn)	646+[XXX]	•	•	
Call Forward	640+[C]	•	•	•
Call Forward - External (Off-Net)	[640]+[*]+[YYYYY]	•	•	•
Call Forward - Follow Me	642+[XXX]+[C]+dest	•	•	•

Function	Code	Digital	Attendant	SLT
Call Park (<i>XTS</i> =groups 1-14, <i>XTSc</i> =groups 1-8)	430-437 = grps 1-8 424-429 = grps 9-14	•	•	•
Call Park - Personal	438	•	•	•
Call Park - Station	439+[XXX]	•	•	
Call Park Pickup - Station	#6+[XXX]	•	•	•
Call Park Pickup - System (<i>XTS</i> =groups 1-14, <i>XTSc</i> =groups 1-8)	#430-#437 = grps 1-8 #424-#429 = grps 9-14	•	•	•
Call Pickup (reqs btn)	#0	•	•	•
Caller ID Display (Answered Calls)	659	•	•	
Caller ID Display (Unans Calls)	635	•	•	
Caller ID Name/Number (reqs btn)	653	•	•	
Calling Forward Override	5#[XXX]+press[B]	•	•	•
Calling Sta Handsfree Mode Override	7#[XXX]	•	•	•
Calling Sta Tone Mode Override	6#[XXX]	•	•	•
Camp On (8 btn)	620	•		•
Clear Call Fwd, DND, Personal Msg	662	•	•	•
CO Line (Idle) Direct Access	88+[LLL] or 8888+[LLL] if Alt Dial Plan	•	•	•
CO Line Grp Access Code (grp 0-23)	800-823	•	•	•
CO Line Grp Access Code (all grps)	824	•	•	•
CO Line Queue	621	•	•	•
CO Line Queue Cancel	626	•	•	•
Conference (8 btn) (reqs btn)	624	•	•	
Dial-By-Name	6*	•	•	
Directory Dial	680	•	•	

Function	Code	Digital	Attendant	SLT
Do Not Disturb	631	•		•
DTMF Receiver Test	657	•	•	•
Executive Override	625	•	•	•
Flash (Centrex) (8-btn digital)	660	•		•
Headset Mode	634	•	•	
HTP (8-btn digital)	667	•		
Hunt Group (group 1-8)	450-457	•	•	•
In and Out Button (reqs btn)	644	•		
Intercom Button (reqs btn)	645	•	•	
Keypad Mode	648+[#,*]	•	•	
Last Number Redial	650 for <i>XTS</i> or [SPEED]+[#] for <i>XTSc</i>	•	•	
LCR (E911 active on CO Line)	800	•	•	•
LCR (if active) or CO Line Group 1	9	•	•	•
Loop Key (reqs btn)	89 or 8889 if Alt Dial Plan	•	•	
Message Wait Answer	663	•	•	•
Modem	499			•
Modem - Voice Mail Access	498			•
Name in Display	690	•	•	•
Night Service (reqs btn)	604	•	•	
Off Hook Voice Over (reqs btn); (n/a for IP Phones)	628	•	•	
Page - All Call	700	•	•	•

Function	Code	Digital	Attendant	SLT
Page - Ext Zone All/1/2/3 (<i>XTSc</i> uses 761 only)	760-762 (763=MPB2 or MPBE)	•	•	•
Page - XTS Internal Zones 1-20, All	701-720, 721	•	•	•
Page - <i>XTSc</i> Internal Zones 1-8, All	701-708, 709	•	•	•
Page - Meet Me (Answer)	770	•	•	•
Personal Messages	633+[ZZ]	•		•
Release Button (reqs btn)	641	•	•	
Repeat Redial	643	•	•	
Ring Down / Hot Line / Off-Hook Pref	691+[BB]	•	•	
Ring Tone (n/a for IP Phones)	695+[RR]	•	•	
Save Number Redial	[SPEED]+[*]	•	•	
School Zone	630	•	•	•
SLT Conference Park	664			•
SLT Directed Call Pickup	#1			•
SLT Message Wait	623			•
SLT Speed Dial	668+[YYYY]			•
SLT Speed Programming	661+[YYYY]			•
SLT Volume	638+[V]			•
Speed Dial	[SPEED]+[YYYY]	•	•	
Station Numbers (Fixed)	100-195 <i>XTS</i> (MPB1) 100-351 <i>XTS</i> (MPB2) 100-419 <i>XTS</i> (MPBE) 100-591 <i>XTS</i> (MPBE w/ Alt. Dial Plan) 100-157 <i>XTSc</i>	•	•	•
Station/Port Fixed Number	611	•	•	

Function	Code	Digital	Attendant	SLT
Station Relocate	636+[XXX]	•	•	
Stop Trace	658	•	•	
UCD Group (grp 1-16)	550-565	•	•	•
Unanswered CO Call Transfer	639	•	•	
Universal Day/Night Answer	#5	•	•	•
Voice Mail Group (grp 1-8)	440-447	•	•	•
VM One Touch Record (reqs btn)	649+[VWV]	•	•	
VM Pse/Res Rec (Dig VM) (reqs btn)	655	•	•	
Voice Mailbox Btn (reqs btn)	460-467+[VMID]	•	•	
Voice MB Btn - Remote (reqs btn)	468+[VMID]	•	•	

TABLE LEGEND

B = Button w/ feature code:
 622 = Call Back
 620 = Camp On
 625 = Exec Override
 623 = Message Wait
 628 = OHVO

BB = Button Number

C = Call Forward Condition Code
 6 = All Calls
 7 = No Answer
 8 = Busy
 9 = Busy/No Answer
 * = Off-Net (for Follow Me only)

FFF = ACD* Call Factor (000-999)

LLL = CO Line Number

MMMM = 2- to 4-digit Mailbox Number

NNN = CO Line Group Access Code
 of group to be forwarded
 801- 823 = CO Group 1-23
 824 = All CO Groups

RR = Ring Tone Number (00-36)

UUU = ACD Group 1-32* for XTS (550-565=groups 1-16, 534-549=groups 17-32) or ACD Group 1-16* for XTSc (550-565 = groups 1-16)

UUUU = ACD Supervisor/Agent ID Code (0000-9999)

V = Volume Control Level (0-9)

VVV = Voice Mail Group Number (440-447)

XX = Custom Message Number (21-30)

XXX = Intercom Station Numbers

YYY = Last 3 digits of Speed Dial Bin Numbers
 000-099 (for use with ACD Call Qualifier)

YYYY = Speed Dial Bin Numbers
 (9000-9999=XTS, 9000-9099=XTSc)

ZZ = Personalized Messages

* Available with optional software

FIXED FEATURE BUTTONS

- **CAMP ON*** -- Enables you to alert a busy party that an outside line is on hold and waiting for them.
- **CONF*** -- Used to establish and build conference calls.
- **FLASH*** -- Used to terminate an outside call and restore dial tone without having to hang up the handset. It is also used to transfer calls behind a PBX or Centrex within those systems.
- **FWD*** -- Allows you to forward your calls to another station.
- **HOLD** -- Enables you to place an outside caller on hold.
- **H-T-P*** -- Allows the user to select the ICM signaling mode: Handsfree, Tone, or Privacy.
- **MSG*** -- Allows you to initiate a message waiting indication at stations that are busy, unattended, or in Do Not Disturb.

(Message Waiting Callback request left at your station is indicated by a flashing MSG WAIT LED.)

- **MUTE** -- Allows you to switch the built-in microphone on or off when using the speakerphone, or the handset microphone when using the handset.
- **ON/OFF** -- Enables you to make a telephone call without lifting the handset. It turns the telephone on and off when using the speakerphone.
- **SPEED** -- Provides you with access to speed dialing, save number redial and last number redial. This button is also used to access flexible button programming.
- **TRANS** -- Used to transfer an outside call from one station to another.
- **VOLUME BAR** -- Allows the user to adjust speakerphone and handset volume.

* = Button is not available on 8-button model

CALL FORWARDING

1. Press the FWD button or dial [640].
2. Dial the desired Call Forward code:
[6] = All Calls [7] = No Answer [8] = Busy
[9] = Busy/No Answer [*] = Off-Net
3. Dial station number where calls are to be forwarded. Confirmation tone sounds.
4. Replace handset or press ON/OFF button.

ESTABLISHING A CONFERENCE

» *Only stations that have the Conference feature enabled will be able to initiate a Conference.*

1. Lift the handset.
2. Select intercom station or dial desired outside party. When called party answers, press CONF.
3. Add next conference party by selecting another outside line or intercom station.
4. Press CONF button again and repeat previous step in a cycle, until all parties are contacted.
5. When last party answers, press CONF twice. All parties are connected.

TERMINATING A CONFERENCE

If a Supervised Conference ... conference initiator can replace handset or press ON/OFF.

If an Unsupervised Conference ... press flashing CONF button while on-hook.

UNSCREENED TRANSFER

1. Press TRANS button and dial station number.
2. When the called extension begins to signal, hang up to transfer the call.
3. Replace handset or press ON/OFF button.

SCREENED TRANSFER

While connected to an outside line:

1. Press station button where call is to be transferred (if programmed on your phone), or press the TRANS button and dial the desired station number.
(The called extension signals according to the intercom signal switch position.)
2. When that extension answers, announce transfer.
3. Hang up to complete transfer.

LEAVING A MSG WAITING INDICATION

If you dial a station that is busy, unattended, or in Do Not Disturb, you can leave a message waiting indication.

1. Press the ON/OFF button.
2. Dial the desired intercom station. A busy tone or DND tone is heard.
3. Press the MSG button. The called party's MSG button LED will flash slowly.
4. Press the ON/Off button to end the call.

PLACING AN OUTSIDE LINE ON HOLD

- If system is programmed for *Exclusive Hold Preference*, press the HOLD button once for Exclusive Hold or twice for System Hold.
- If your system is programmed for *System Hold Preference*, press the HOLD button once for System Hold or twice for Exclusive Hold.

STORING SPEED NUMBERS

1. Press the SPEED button twice.
2. Dial the speed bin location.
 - 9000 to 9019 = Station Speed numbers
 - 9020 to 9999 = System Speed numbers (XTSc = 9020-9099)
3. Dial desired telephone number.
4. Press the SPEED button.
5. Press ON/OFF to end speed dial programming.

To clear an existing speed bin:

1. Press the SPEED button twice.
2. Dial the speed bin location.
3. Press SPEED again. Confirmation tone sounds.

DIALING A SPEED NUMBER

1. Press SPEED and dial the speed bin location, or press preprogrammed speed bin button.
2. When called party answers, pick up handset or use speakerphone.

DIRECTORY DIALING

Users with display telephones may view a list of individuals on the telephone system and have the system automatically dial that person.

Directory Dialing may also be used to transfer a call from one station to another.

1. Dial the Directory List dial code [680], or press the DIRECTORY DIAL flexible button.
2. Press a button on the keypad once, twice, or three times, to represent the letter of the alphabet, to begin viewing the list of names.
3. Scroll through the Directory List to select a name as follows:
 - Press [*] to scroll to next entry, or
 - Press [#] to scroll to previous entry.
4. Press SPEED at the desired name to automatically dial the destination station or outside phone number (via Speed Dial).

TO TRANSFER A CALL USING DIRECTORY DIALING

1. Press the TRANS button.
 2. Dial Directory Dial Code [680], or press the DIRECTORY DIAL flexible button.
 3. Press digit associated with person's name. When name displays, press SPEED to automatically dial the station.
 4. Press ON/OFF to complete transfer.
- » *Calls may only be transferred to internal stations.*

PROGRAMMING FLEXIBLE BUTTONS

1. Press SPEED twice.
2. Press flexible button to be programmed.
3. Dial desired code from the following chart. Confirmation tone sounds.
4. Press ON/OFF.

All Call Page (Internal & External)	700
Call Back	622
Call Park Location - XTS (Sys)	424-437
Call Park Location - XTSc (Sys)	430-437
Call Park Location (Station)	439+[XXX]
Directory Dial	680
Do Not Disturb	631
Extension Numbers	100-419
	100-157 (XTSc)
External All Call Page (All External Zones - XTS only)	760
Ext Pg - Zones 1 or 2	76+[1 or 2]
	(only Zone 1 XTSc)
Internal Pg (XTS) - Zones 1-20, All 701-720, 721	
Internal Pg (XTSc) - Zones 1-8, All 701-708, 709	
Line Queue	621
Personal Park	438
Speed Dial Access	[SPEED]+[YYYY]
Save Number Redial	[SPEED]+[*]
VM Group Pilot Numbers	440-447
<hr/>	
XXX = Station Extension Numbers	
YYYY = Speed Dial Bin Numbers	


To erase a flexible button:

1. Press SPEED twice.
2. Press flexible button to be erased.
3. Press FLASH. Confirmation tone sounds.
4. Press ON/OFF.



Large Screen Display Features

The digital 30-button model provides a 7-line by 16-character display with 10 Soft Keys, a MENU key, and UP/DOWN scroll keys.

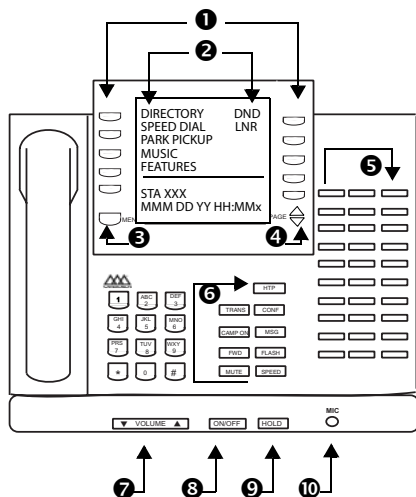

Using the Soft Keys

Calendar Mode -- When in idle mode, the default monthly calendar will display, or you can press the MENU soft key.

MMM YYYY						
SUN	MON	TUES	WED	THURS	FRI	SAT
		1	2	3	4	5
6	7	8	9	10	11	12
13	14	15	16	17	18	19
20	21	22	23	24	25	26
27	28	29	30	31		
☒ STA XXX						
MMM DD YY HH:MMx						

Main Menu -- To access the main menu at any time, press the MENU soft key.

DIRECTORY	
DND	
SPEED DIAL	LNR
PARK PICKUP	
MUSIC	
FEATURES	
☒ STA XXX	
MMM DD YY HH:MMx	

To select a main menu option:

Feature/Button Descriptions
4. Soft Keys -- used to access specific features and functions.
5. LARGE Screen -- designed to provide a 7-line by 16-character viewing area.
6. MENU Key -- toggles between main menu screen and monthly calendar.
7. PAGE Up/Down Keys -- used to advance to the NEXT and PREVIOUS option screens available.
8. DSS Console -- provides access to 30 flexible feature/functions.
9. Fixed Feature Keys -- used to access specific fixed feature/ functions.
10. VOLUME Control Bar -- used to adjust level of tones, background music, ringing, receiver volume, and display contrast.
11. ON/OFF Key -- used to make a call without lifting the handset.
12. HOLD Key --used to place calls on hold and to retrieve held calls.
13. MICrophone -- used to talk with other party without using the handset.

Press...	Display shows...	Then...
DIRECTORY	ABC DEF GHI JKL MNO	press the soft key associated with the desired number.
	» Use PAGE UP/DN keys to display the previous or next 5 names in Directory. » To scroll through the list, press the [*] key to view the previous entry, or [#] to view the next entry.	
SPEED DIAL	Enter Bin Number	dial the bin number associated with desired external phone number.
Wait for number to display before pressing SPEED button.		
PARK PICKUP	PARK 1 PARK 2 PARK 3 PARK 4 PARK 5	select desired Park location where call is holding (1-5). Press PG DN key to select PARK locations 6-8.
MUSIC	BGM1 BGM2 BGM OFF	select background music option.
FEATURES	CALL FWD PAGE INTERNAL PAGE EXTERNAL VOICE MAIL MORE	select one of the features listed.



After selecting **FEATURES** on the main menu, the following options will display:

Call Forward

Press...	Then select ...	Display will show...
CALL FWD	All Busy No Answer Busy/No Answer Off Net*	Sta Voice Mail Operator ACD/UCD Hunt

* If Off-Net is selected, enter desired bin number.

If you select...	Then...
Sta	dial desired station number.
Voice Mail	select VM group (1-5). To access groups 6-8, press PG DOWN key.
Operator	display shows a "Forwarded to XXX" message & the main menu returns.
ACD/UCD	select ACD/UCD group (1-5). To access group 6-16, press PG DOWN key.
Hunt	choose Hunt group (1-5). To access groups 6-8, press PG DOWN key.

Page -- Internal/External

Press...	Then select...
PAGE INTERNAL	Page Zone (ALL Call or Zones 1-4). To access Page Zones 5-8, press PG DOWN key.
PAGE EXTERNAL	Page Zone (ALL Call or 1-2).

More

Press...	Then select...
MORE	Messages Headset Enable Headset Disable UNA/UDA More
Messages	Clear On Vacation Return AM Return PM Return Tomorrow <i>Press PG DN key to access these messages:</i> Return Next Week On Trip In Meeting At Home On Break At Lunch
More	Ans Machine Ring Ans Machine Spkr Ans Machine Off

Voice Mail

Press...	Then select...
VOICE MAIL	desired VM group (1-5). To access group 6-8, press PG DOWN key.

NOTE -- To access these voice mail options, a digital voice mail system must be in use.

Enter password to access these VM options:

Press...	Then select...
RETRIEVE MSGS	Delete Reply Skip Call Back Save Forward Reply
Forward	Forward Msg As Is Forward Add Preamble Cancel
Forward Add Preamble	Continue Hear Cancel Re-Record
SEND MSG	Re-Record Append OK Hear Cancel <i>Dial [6] to select one of the following options:</i> Private Cancel Future Urgent Confirm Send
CHANGE GREETING CHANGE PASSWORD CHANGE NAME	a new greeting, password, or name by entering the change.

Page/Queue Displays (for LCR)

- When receiving an internal/external page, display will show the "MEET ME" option.
- When queuing for a line, the screen will display the "QUE CNL" option.
- If already in queue & a page is received, display shows both "MEET ME & QUE CNL".

■	DIRECTORY	DND	■
■	SPEED DIAL	LNR	■
■	PARK PICKUP		■
■	MUSIC	MEET ME	■
■	FEATURES	QUE CNL	■
☒	STA XXX		▲
	MMM DD YY HH:MMx		▼



----- **FIXED FEATURE BUTTONS** -----

CONF -- Used to establish conference calls.

DND (do not disturb) -- Prevents calls from ringing at your station when you are on a call or busy. Also used to activate a Page Block feature.

FLASH -- Used to end an outside call and restore dial tone without hanging up.

FWD -- Allows you to forward your calls to another destination.

HOLD -- Enables you to place calls on hold and to retrieve held calls.

ICM -- *Not used at this time.*

MUTE -- Allows you to switch the built-in microphone on or off when using speakerphone, or the handset microphone when using handset.

MSG/CALLBK - Used for Auto-Callback to a phone that left a text msg, or to access voice messages.

PGM -- Used as a rotary to select mode of operation: Handsfree (LED not lit), Tone (LED lit solid), or Privacy (LED blinking).

REDIAL -- Used to dial last number dialed.

SAVE -- *Not used at this time.*

SPEAKER -- Used to make a call without lifting the handset. Serves as an ON/OFF button.

SPEED -- Provides access to Speed Dialing, Save Number Redial, and Last Number Redial. Also used to access flexible button programming.

TRANS -- Used to transfer an intercom or outside call from one station to another.

VOLUME -- Allows you to adjust speakerphone and handset volume.

CALL FORWARDING

1. Press the FWD button, *-or-* dial feature code [640].
2. Dial the desired Call Forward code:
[6] = All Calls [7] = No Answer [8] = Busy
[9] = Busy/No Answer [*] = Off-Net
3. Dial the station number where calls are to be forwarded. Confirmation tone sounds.
4. Replace handset or press the SPEAKER button.

ESTABLISHING A CONFERENCE

Only those stations that have the Conference feature enabled will be able to initiate a Conference.

1. Lift the handset.
2. Select intercom station or dial desired outside party. When called party answers, press CONF.
3. Add the next conference party by selecting another outside line or intercom station.
4. Press CONF again and repeat previous step in a cycle, until all parties are contacted.
5. When last party answers, press CONF twice. All parties are connected.

TERMINATING A CONFERENCE

If a Supervised Conference ... the person that initiated the conference can replace the handset or press the SPEAKER button.

If an Unsupervised Conference ... press the flashing CONF button while on-hook.

LEAVING A MESSAGE WAITING INDICATION

If you dial a station that is busy, unattended, or in DND, you can leave a message waiting indication.

1. Press the SPEAKER button.
2. Dial the desired intercom station. A busy tone or DND tone is heard.
3. Press the MSG button. The called party's MSG button LED will flash slowly.
4. Press the SPEAKER button to end the call.

TRANSFER - Unscreened

1. Press TRANS and dial desired station number.
2. When the called extension begins to signal, hang up to transfer the call.
3. Replace handset or press the SPEAKER button.

TRANSFER - Screened

While connected to an outside line:

1. Press the station button where the call is to be transferred (if programmed on your phone), *-or-* press TRANS and dial the station number. (The called extension signals according to the intercom signal switch position.)
2. When extension answers, announce transfer.
3. Hang up to complete transfer.

**PLACING AN OUTSIDE LINE ON HOLD**

- If system is programmed for *Exclusive Hold Preference* ... press HOLD once for Exclusive Hold or twice for System Hold.
- If system is programmed for *System Hold Preference* ... press HOLD once for System Hold or twice for Exclusive Hold.

STORING SPEED NUMBERS

1. Press the SPEED button twice.
2. Dial the speed bin location.
 - 9000 to 9019 = Station Speed numbers
 - 9020 to 9999 = System Speed numbers (XTSc = 9020-9099)
3. Dial the desired telephone number.
4. Press the SPEED button.
5. Press the SPEAKER button to end speed dial programming.

To clear an existing speed bin:

1. Press the SPEED button twice.
2. Dial the speed bin location.
3. Press the SPEED button again. Confirmation tone sounds.

DIALING A SPEED NUMBER

1. Press SPEED and dial the speed bin location, - or- press *preprogrammed* speed bin button.
2. When called party answers, pick up the handset or use the speakerphone.

DIRECTORY DIALING

1. Dial the Directory List dial code [680], -or- press DIRECTORY DIAL flexible button.
2. Press a button on the keypad once, twice, or three times, to represent the letter of the alphabet, to begin viewing the list of names.
3. Scroll through Directory List to select name using [*] or [#] for next or previous entry.
4. Press the SPEED button at the desired name to automatically dial the destination station or outside phone number (via Speed Dial).

To transfer a call using Directory Dialing:

1. Press TRANS & dial Directory Dial Code [680], -or- press DIRECTORY DIAL flexible button.
2. Press digit linked to person's name. When name displays, press SPEED to dial station.
3. Press SPEAKER button to complete transfer. (*Transfer applies to internal stations only.*)

PROGRAMMING FLEXIBLE BUTTONS

1. Press SPEED twice, then press flexible button to be programmed.
2. Dial the desired code from the following chart. Confirmation tone sounds.
3. Press the SPEAKER button.

All Call Page (Internal & External)	700
Call Back	622
Call Park Location - XTS (Sys)	424-437
Call Park Location - XTSc (Sys)	430-437
Call Park Location (Station)	439+[XXX]
Call (Park) Pickup	#6+[XXX]
Caller ID Review (Answered)	659
Caller ID Review (Unanswered)	635
Camp On (8-Btn and IP Phone)	620
Clear Call Fwd, DND, Pers Msg	662
CO Line (<i>idle</i>) Direct Access	88+[LLL] or
if Alt Dial Plan	8888+[LLL]
CO Line Grp Access Code	800-823
(grp 0-23)	
CO Line Grp Access Code (All)	824
CO Line Queue	621
Directory Dial	680
Extension Numbers	100-419
	100-157 (XTSc)
External All Call Page	760
(All External Zones - XTS only)	
External Page - Zones 1 or 2	76+[1 or 2]
(only Zone 1 for XTSc)	
Headset Mode	634
In and Out Button (<i>reqs btn</i>)	644
Internal Pg (XTS) - Zones 1-20, All 701-720, 721	
Internal Pg (XTSc) - Zones 1-8, All 701-708, 709	
Line Queue	621
Personal Park	438
Save Number Redial	[SPEED]+[*:]
Speed Dial Access	[SPEED]+[YYYY]
VM Group Pilot Numbers	440-447

LLL = Line Number

XXX = Station Extension Numbers

YYYY = Speed Dial Bin Numbers

To erase a flexible button:

1. Press the SPEED button twice.
2. Press the flexible button to be erased.
3. Press FLASH. Confirmation tone sounds.
4. Press SPEAKER button to end programming.